

ASSEMBLY AND INSTALL INSTRUCTIONS

(GENERIC FOR ALL VERTICAL MANAGERS)

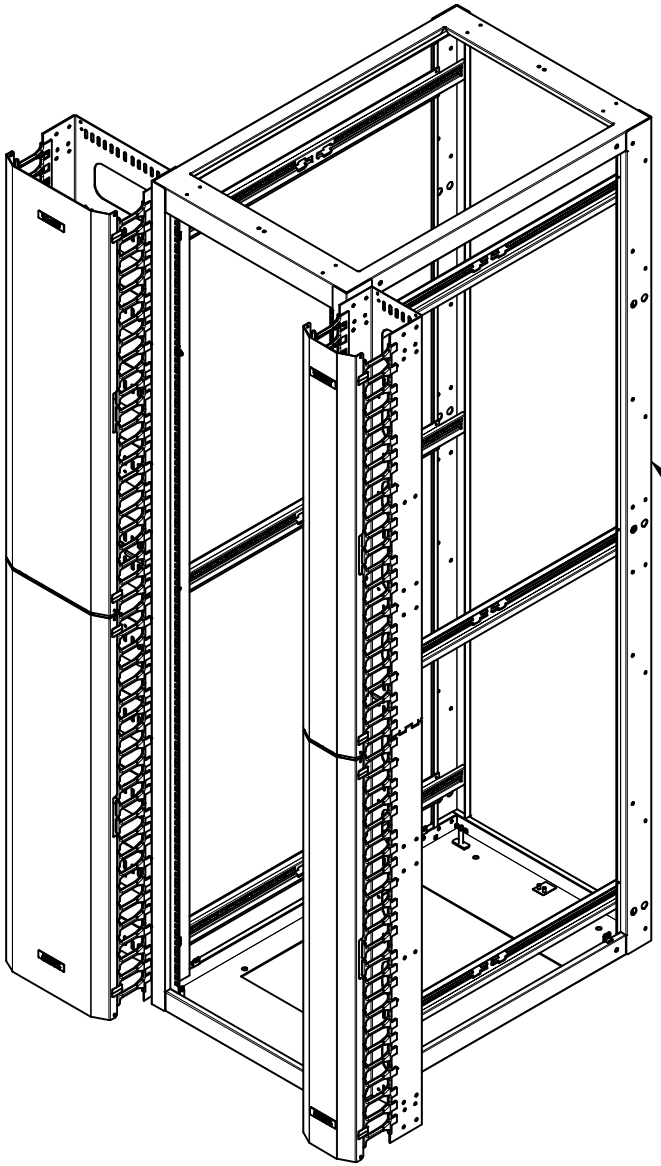

** RFPR Mounting

** RACK Mounting

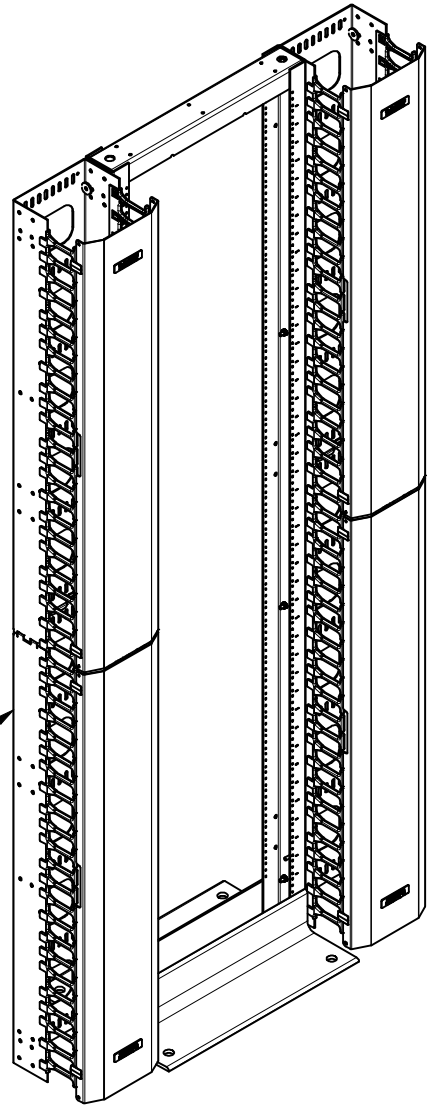

NOTE:
* All RHDV items will come pre-assembled.
* In the box: 2 pre-assembled bodies, 2 assembled doors, and a hardware package.

R.F. MOTE
A division of Chatsworth Products


214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES	DESCRIPTION			
FRAC. ± 1/16" ANGLE ± 1.0° HOLES ± 0.003" 0.000 ± 0.015"	PART NUMBER GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS			
	DATE 25/06/2024		MASS 133.25 lb	REV 00
	AUTHOR gillison_j			SHEET 1 OF 5


The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

1. Mounting Cable Managers to Racks & RHDVs:


a. Position the bottom half of the manager next to the Rack or RFPR (4 post rack cabinet).
b. Attach the manager to the Rack / RFPR using 1 bag of the 1/4-20 nuts and bolts supplied. (4x half body) (See Detail A)
** Note: Do not fully tighten.
** Note: The fender washers are used for CPI's VCM mounting on R.F.MOTE product.
c. Position the top half of the manager next to the Rack or RFPR and lower it into position using the offset tabs to align and lock the bodies together. (See Detail B)
d. Once bottom and top bodies are mounted, finish tightening down all hardware.
d. Repeat step b. for mounting another VCM on the other side or between another Rack or RFPR.

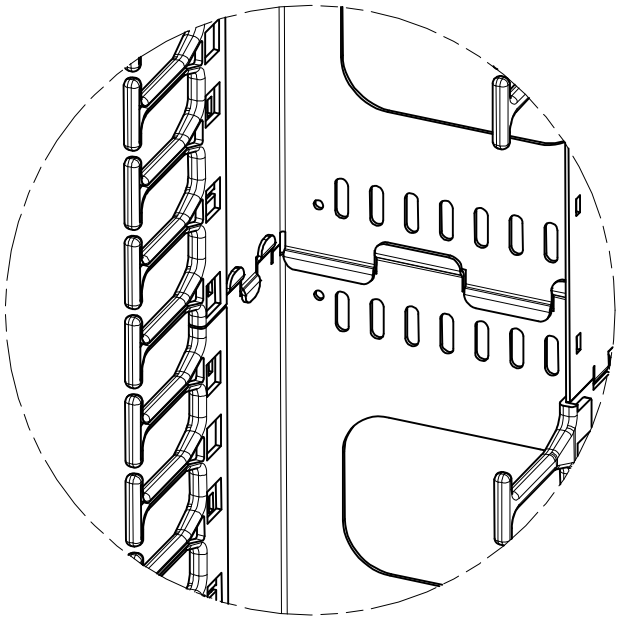

DETAIL B

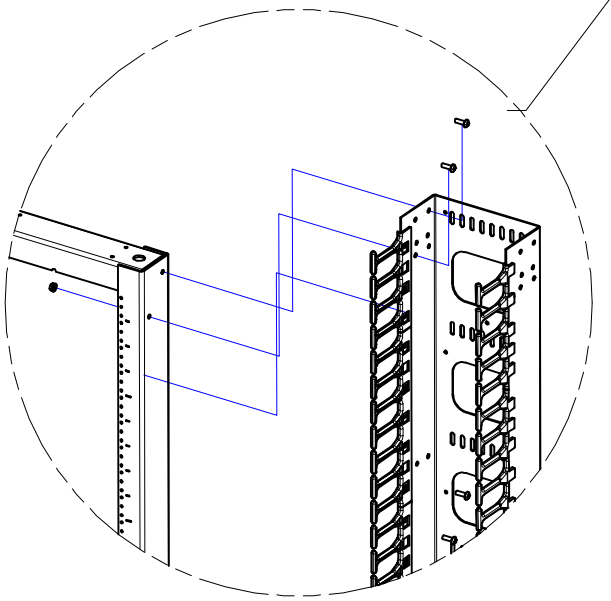

DETAIL A

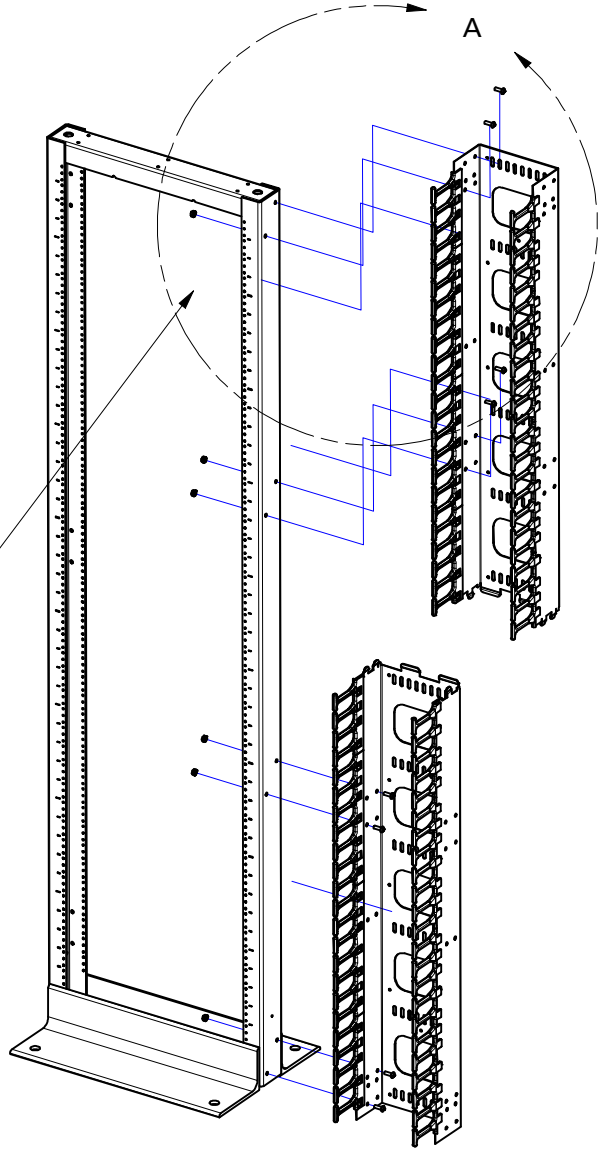

R.F. MOTE
A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188


TOLERANCES	DESCRIPTION			
FRAC. ± 1/16" ANGLE ± 1.0° HOLES ± 0.003" 0.000 ± 0.015"	PART NUMBER GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS			
	DATE 25/06/2024		MASS 133.25 lb	REV 00
	AUTHOR gillison_j			SHEET 2 OF 5

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**


1. Assembling Cable Manager
   a. Remove items from box.
   b. Remove the doors off of both halves.
   c. Align both bodies flush and plumb with the offset tabs facing each other.
      Slide them together engaging the tabs into place. (See Detail A)
   d. Once done, the manager is ready for mounting.


**Note: When installing, mounting the bottom half of the manager
to the Rack or RFPR before the top may be easier for handling.

2. Assembling Doors
   a. Locate the small square on the side flanges. (See Detail B)
   **Note: This end will always attach facing the outside
   top and bottom of the full manager.
   (Mote label on top side of assembly)
   b. Once the outside ends are located, align the edge roughly
   flush with the last finger and apply pressure where the clips are located.
   The door will snap-on into place (4x) (See Detail C)
   **Note: The doors can open from either side.

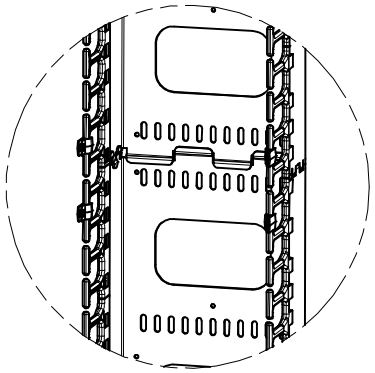


DETAIL A

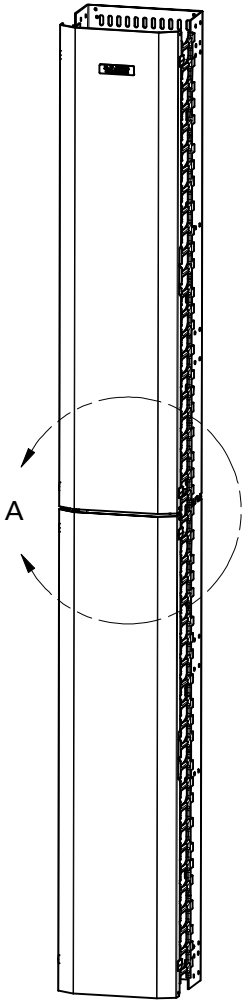

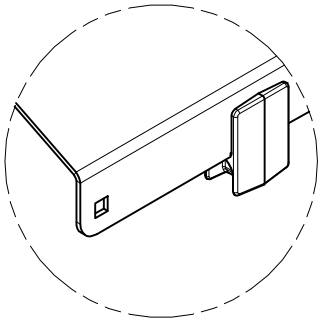

DETAIL B

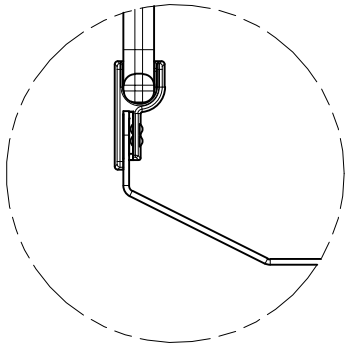

DETAIL C

R.F. MOTE
A division of Chatsworth Products
214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES	DESCRIPTION			
FRAC. ± 1/16" ANGLE ± 1.0° HOLES ± 0.003" 0.000 ± 0.015"	PART NUMBER GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS			
	DATE 25/06/2024		MASS 17.86 lb	REV 00
	AUTHOR gillison_j		SHEET 3 OF 5	

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

1. Assembling DB-EX Cable Manager

a. Remove items from box.

b. Remove the doors off of all half bodies.

c. Begin with aligning 2 bodies flush together with the offset tabs facing one another. Slide them into each other engaging the tabs and therefore locking the bodies together. (See Detail A)

d. Repeat step c. with the other 2 body half's.

e. With the hardware provided, fasten both full bodied managers back to back, flush and plum. (See Detail B)

** Note: Do not tighten fully until all screws and nuts are installed.

f. Once done, the manager is ready for mounting.
(See Page 2.)

**Note: When installing, mounting the bottom half of the manager to the Rack or RFPR before the top and the backside, may be easier for handling.


2. Assembling Doors

a. Locate the small square on the side flanges. (See Detail C)


**Note: This end will always attach facing the outside top and bottom of the full manager.
(Mote label on top side of assembly)

b. Once the outside ends are located, align the edge roughly flush with the last finger and apply pressure where the clips are located. The door will snap-on into place (4x) (See Detail D)


**Note: The doors can open from either side of the manager.

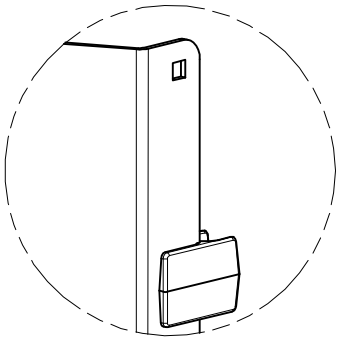


DETAIL C

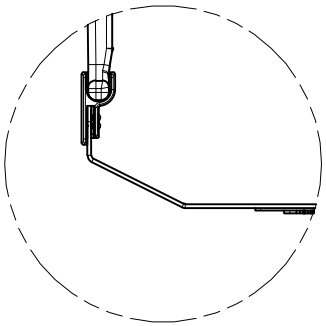


DETAIL D

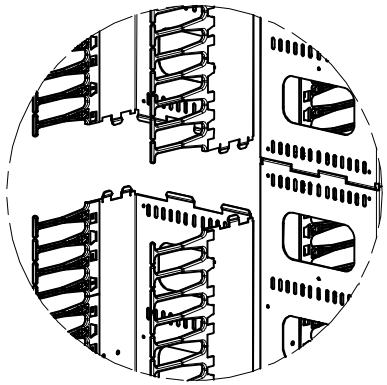

DETAIL A

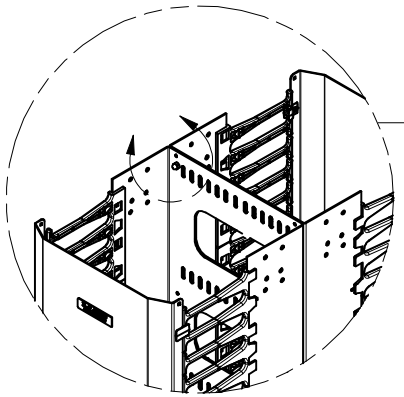

DETAIL B

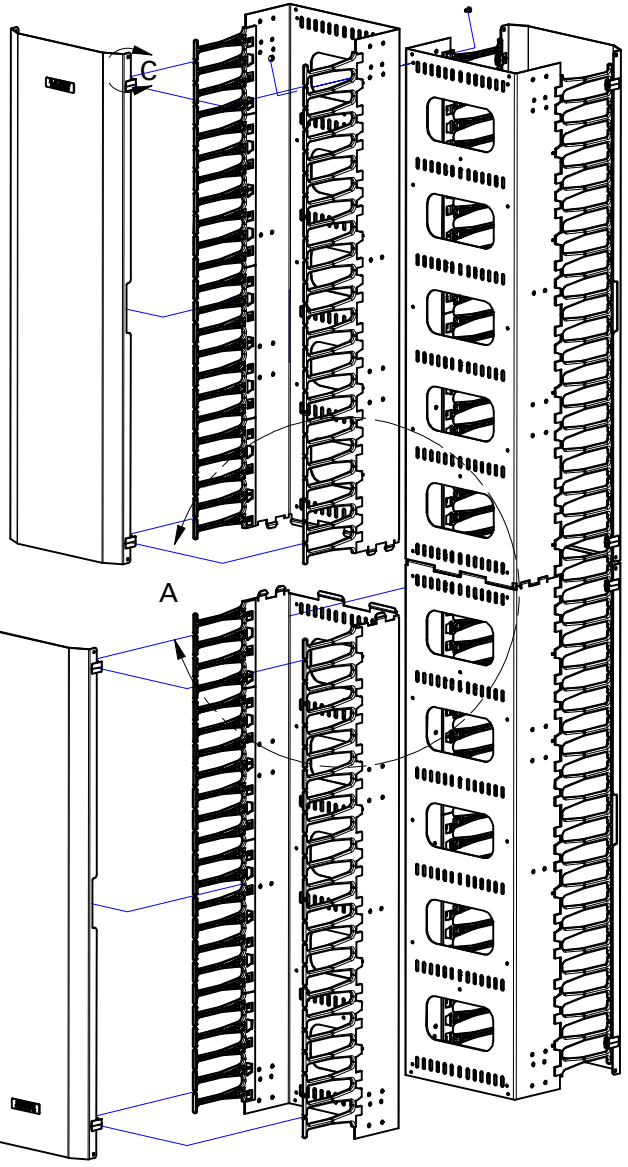

R.F. MOTE
A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES	DESCRIPTION
FRAC. ± 1/16"	
ANGLE ± 1.0°	
HOLES ± 0.003"	
0.000 ± 0.015"	
PART NUMBER	GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS
DATE	25/06/2024
MASS	26.5 lb
REV	00
AUTHOR	gillison_j

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

1. Assembling HDRFK Cable Manager
   a. Remove items from boxes.
   b. Remove the doors off of the half bodies.
   c. Begin with aligning the RHDV bodies flush together, with the offset tabs facing one another. Slide them into each other engaging the tabs and to lock the bodies together. (See Detail A)
   d. With the hardware provided in the HDRFK box, fasten the back sub-assembled sides to the back of the manager. (See Detail B)

**Note: Back assembled sides have approx. 1" of material past fingers on one end only. This end is attached towards the outer ends of the manager. (See Detail B Detail)


   e. With the hardware provided, fasten the manager to the Rack or RFPR. (See Detail B)

** Note: Do not tighten fully until the rear side sub-assemblies are installed.


   f. Once done, the manager is ready for mounting. (See Page 2.)

**Note: When installing, mounting the bottom half of the manager to the Rack or RFPR before the top and the backside, may be easier for handling.


2. Assembling Doors
   a. Locate the small square on the side flanges. (See Detail C)
   **Note: This end will always attach facing the outside top and bottom of the full manager. (Mote label on top side of assembly)
   b. Once the outside ends are located, align the top edge of door roughly flush with the last finger and apply pressure where the clips are located. The door will snap-on into place (4x) (See Detail D)
   **Note: The doors can open from either side of the manager.

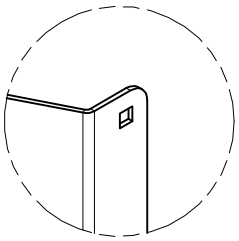


DETAIL C

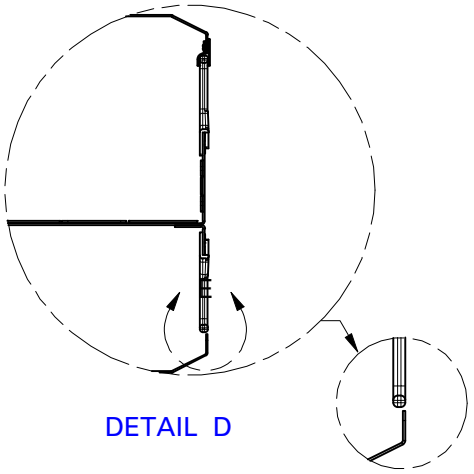


DETAIL D

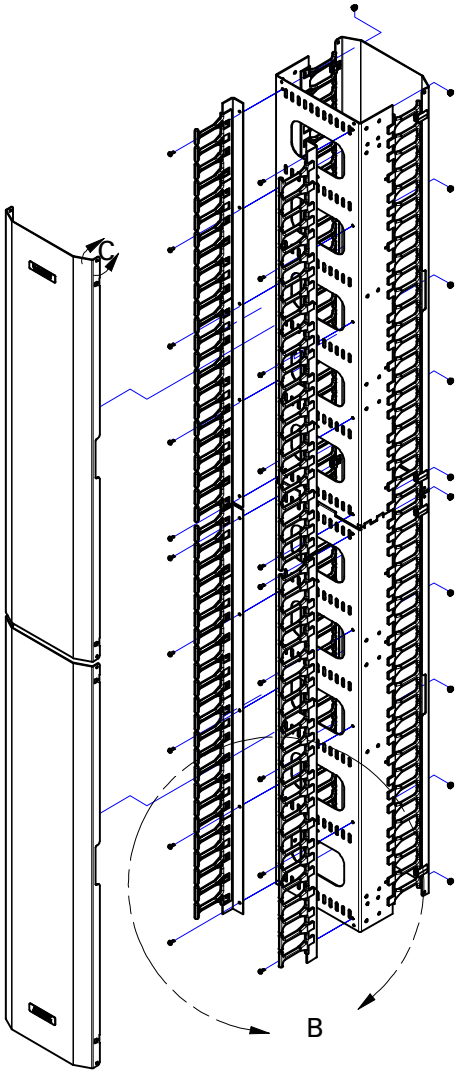

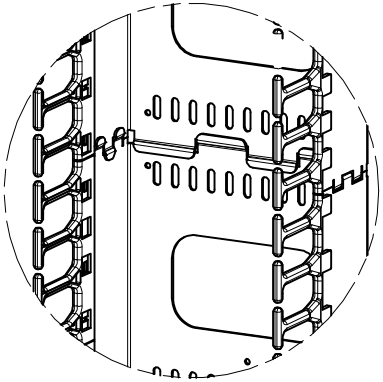

DETAIL A

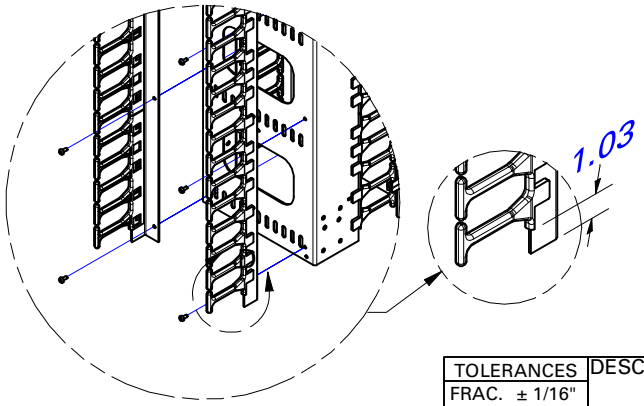

DETAIL B

R.F. MOTE
A division of Chatsworth Products
214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES	DESCRIPTION			
FRAC. ± 1/16" ANGLE ± 1.0° HOLES ± 0.003" 0.000 ± 0.015"				
	PART NUMBER GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS			
	DATE 25/06/2024		MASS 29.32 lb	REV 00
	AUTHOR gillison_j			SHEET 5 OF 5

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**