


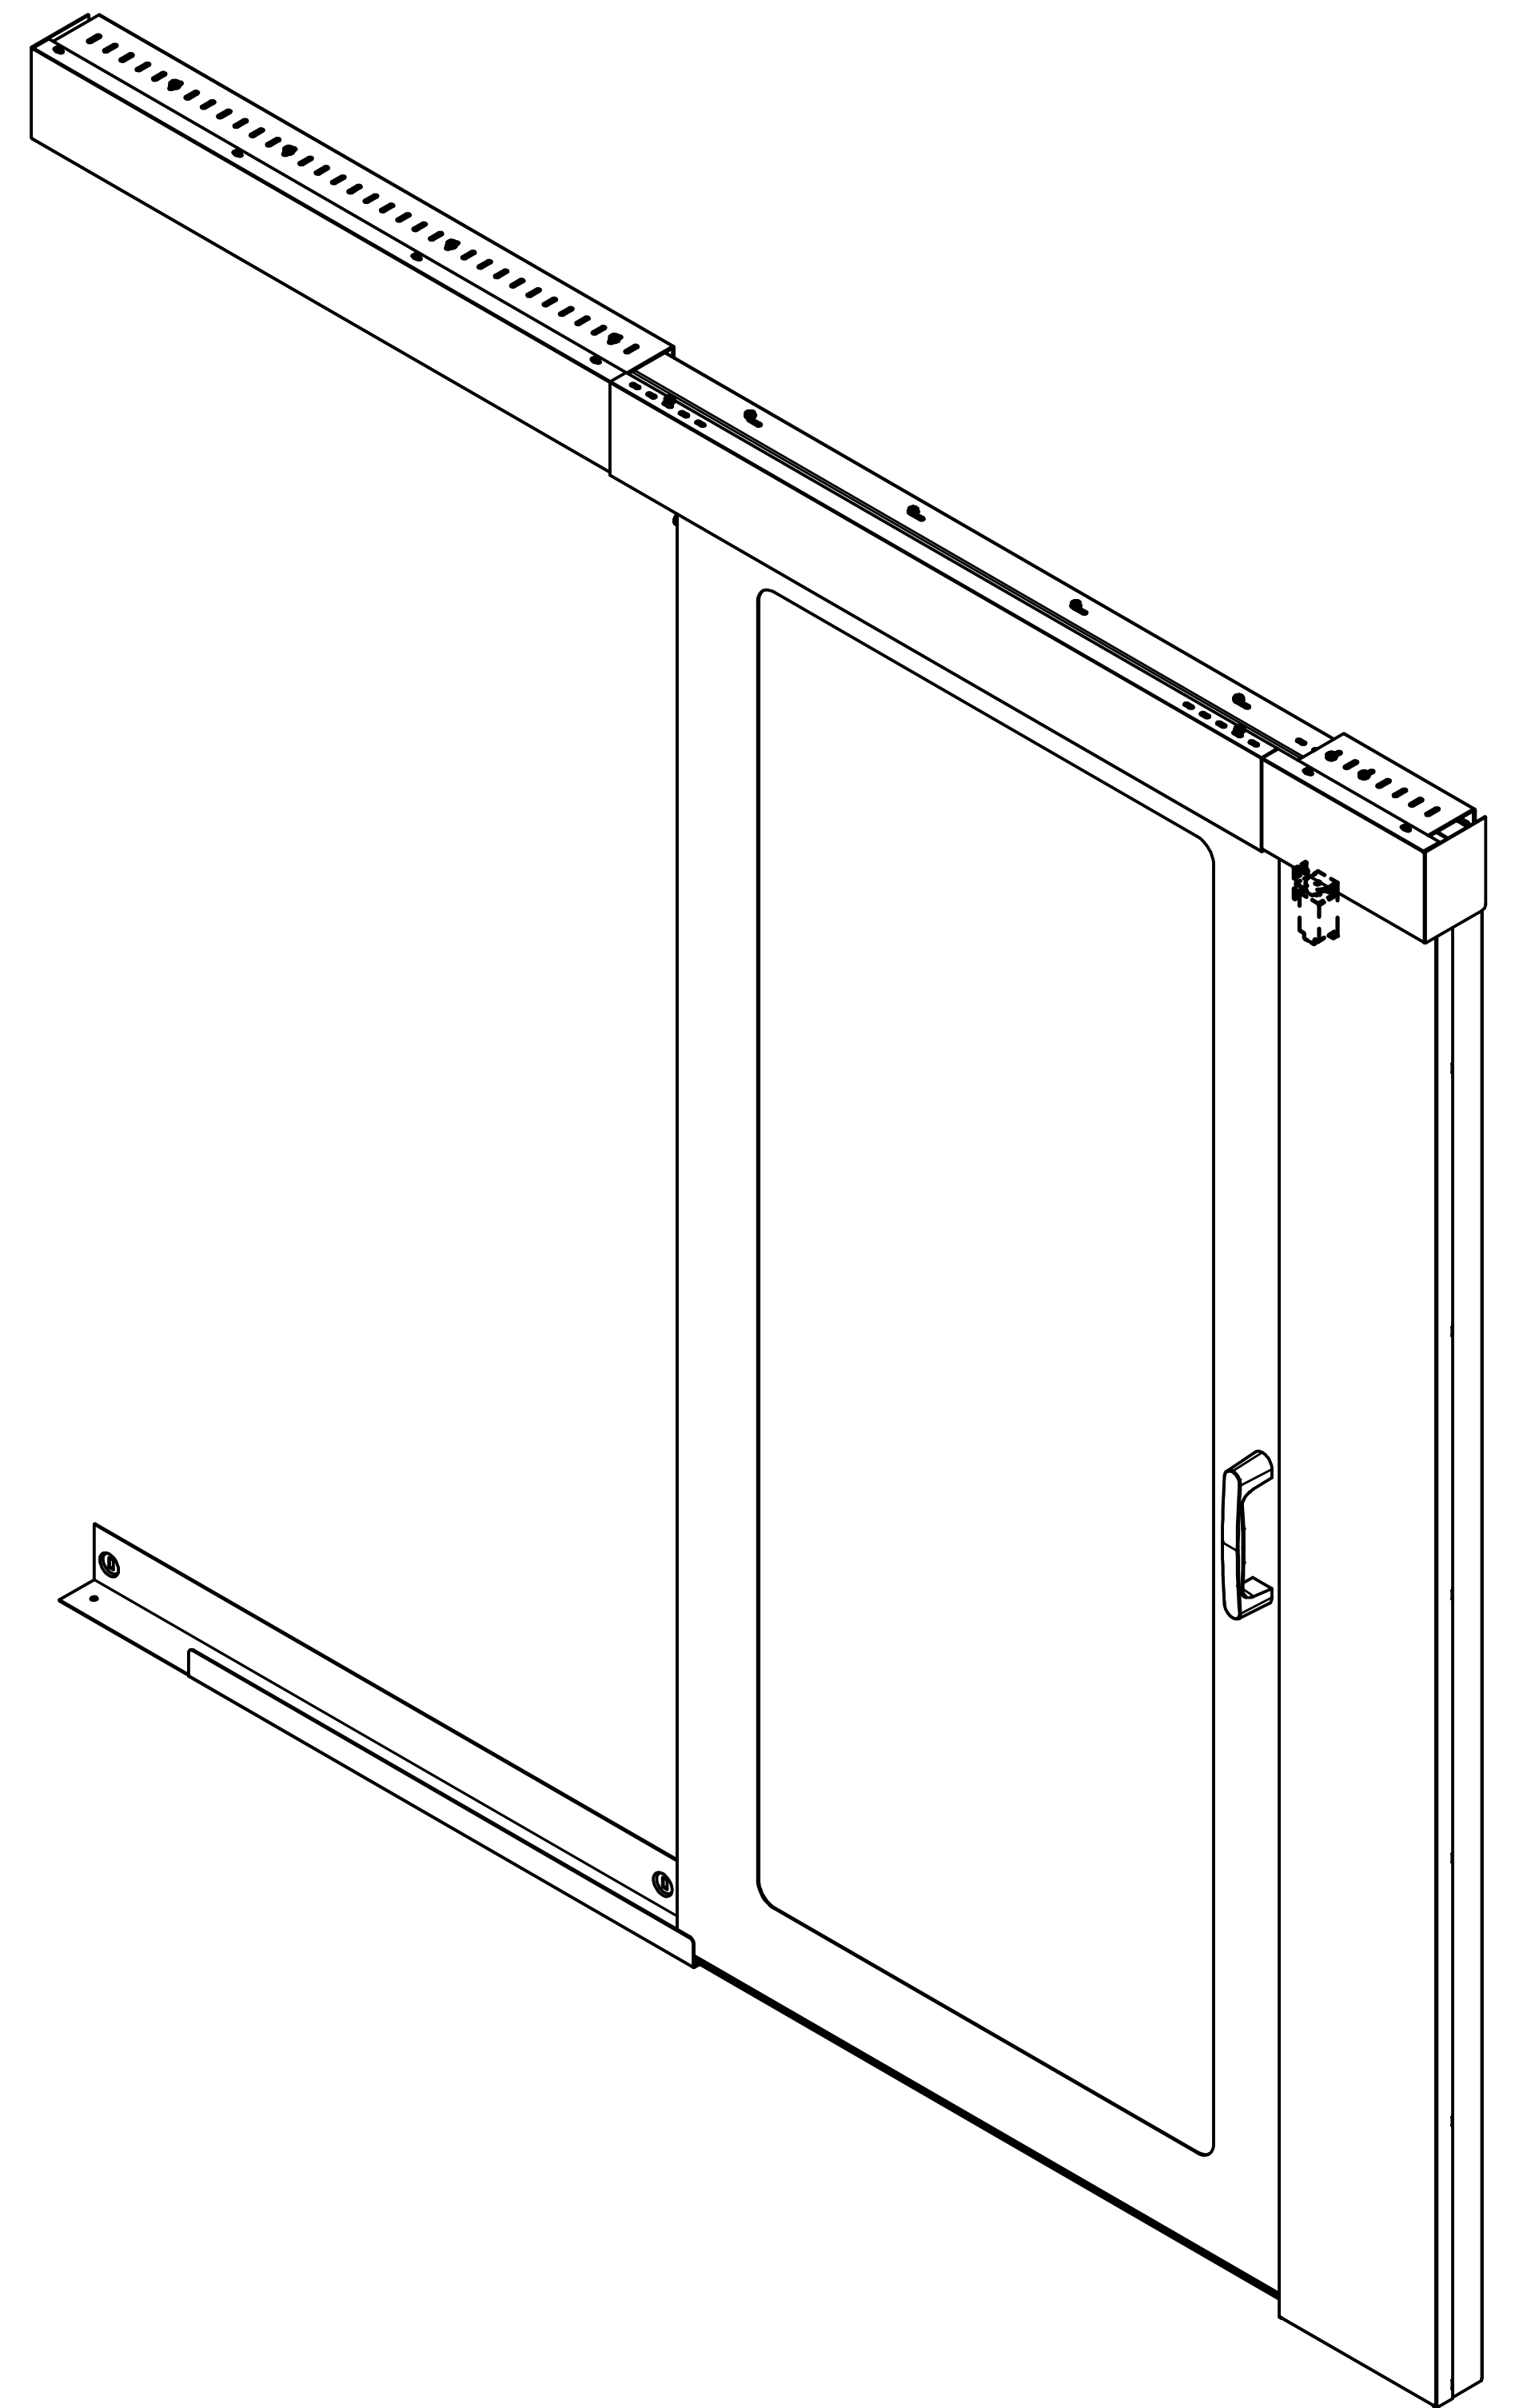

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**




R.F.MOTE LTD ENGINEERED SYSTEMS		214 NEWKIRK RD. RICHMOND HILL, ONTARIO L4C 3G7 PHONE (905) 884-5250 FAX (905) 737-5188	
PROJECT			
PART NUMBER			
RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS			
DATE	SCALE	WEIGHT	REV
08-Oct-20	0.15 : 1	124.323 lbmass	00
AUTHOR			
Voula	SHEET 1 OF 6		

Step 1: Attach the cabinet mount bracket (Item 10) to the top of each cabinet through the 2 holes provided using the supplied 1/4"-20 hardware (see Detail A)

Note: The cabinet holes may be covered with a plastic plug. Remove these plugs prior to install of the mounting brackets.

Step 2: Attach the track (Item 26) and the track mount bracket (Item 11) to the cabinet mount brackets using the supplied 10-32 hardware. The bolts will be directed upwards through the track (see Detail B for screw direction/orientation) and will be mounted through all 3 parts. The track should already be preassembled. Remove the hardware from the assembly and use to install through the same hole locations if possible.


Note: Ensure the track is centered with reference to the aisle. Ensure it is level to the floor and cabinets, and ensure it is square in all directions prior to tightening the hardware. Make all adjustments to the track before hanging the doors.

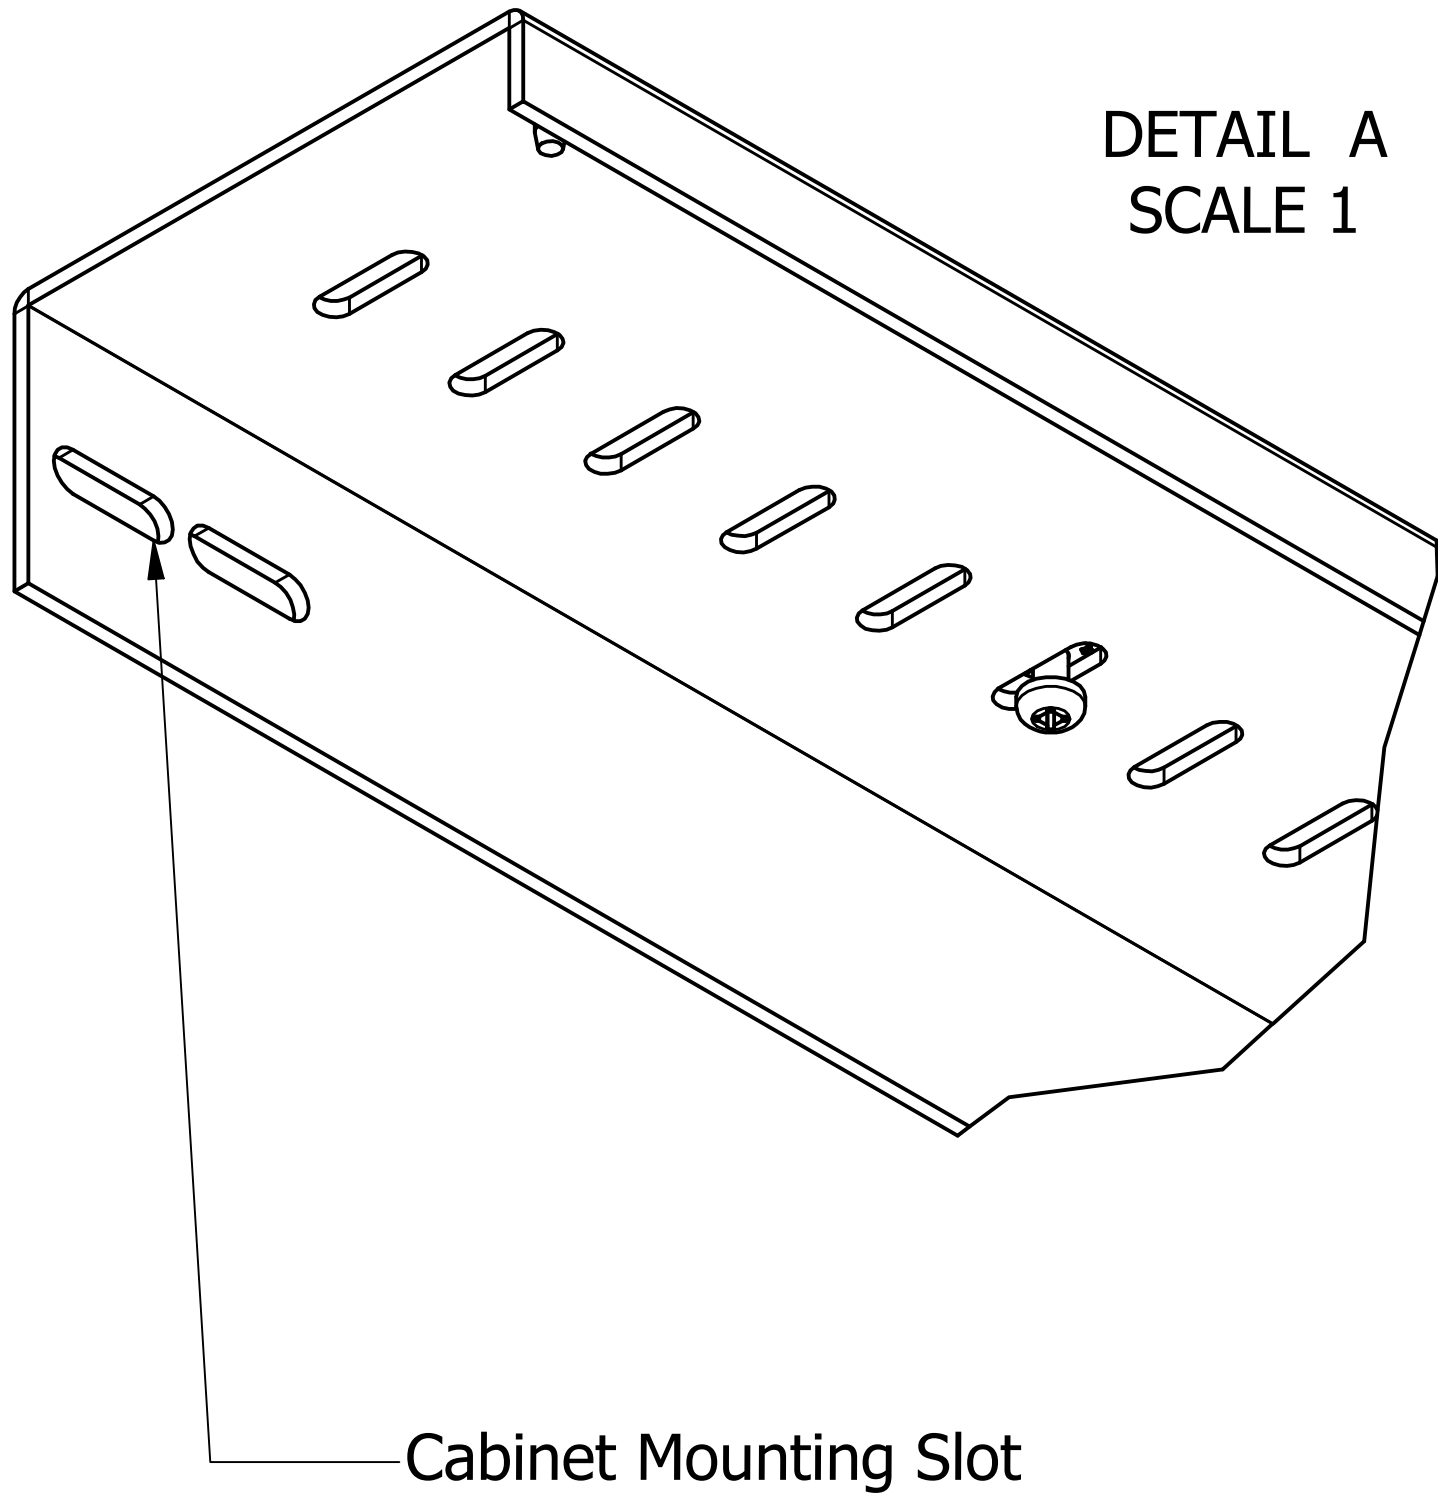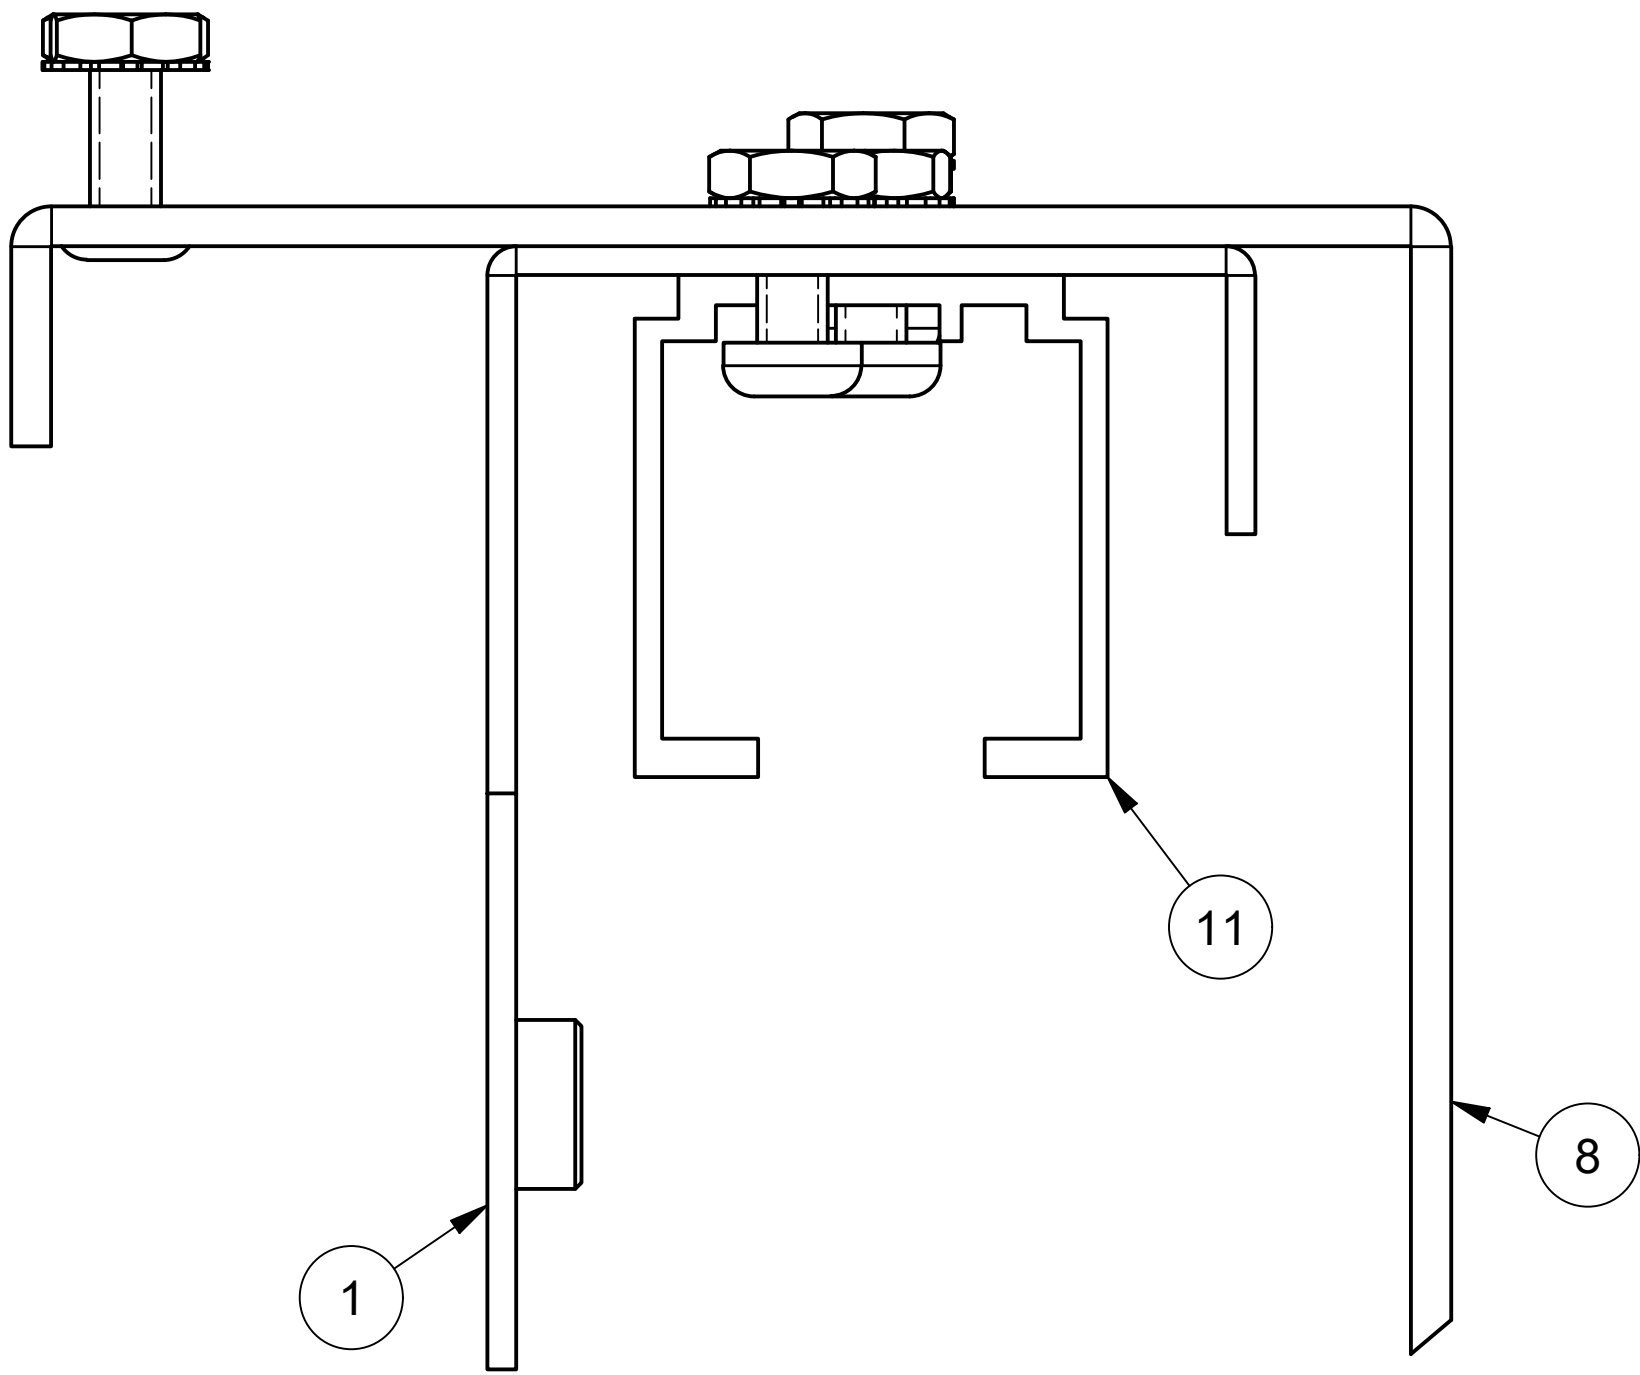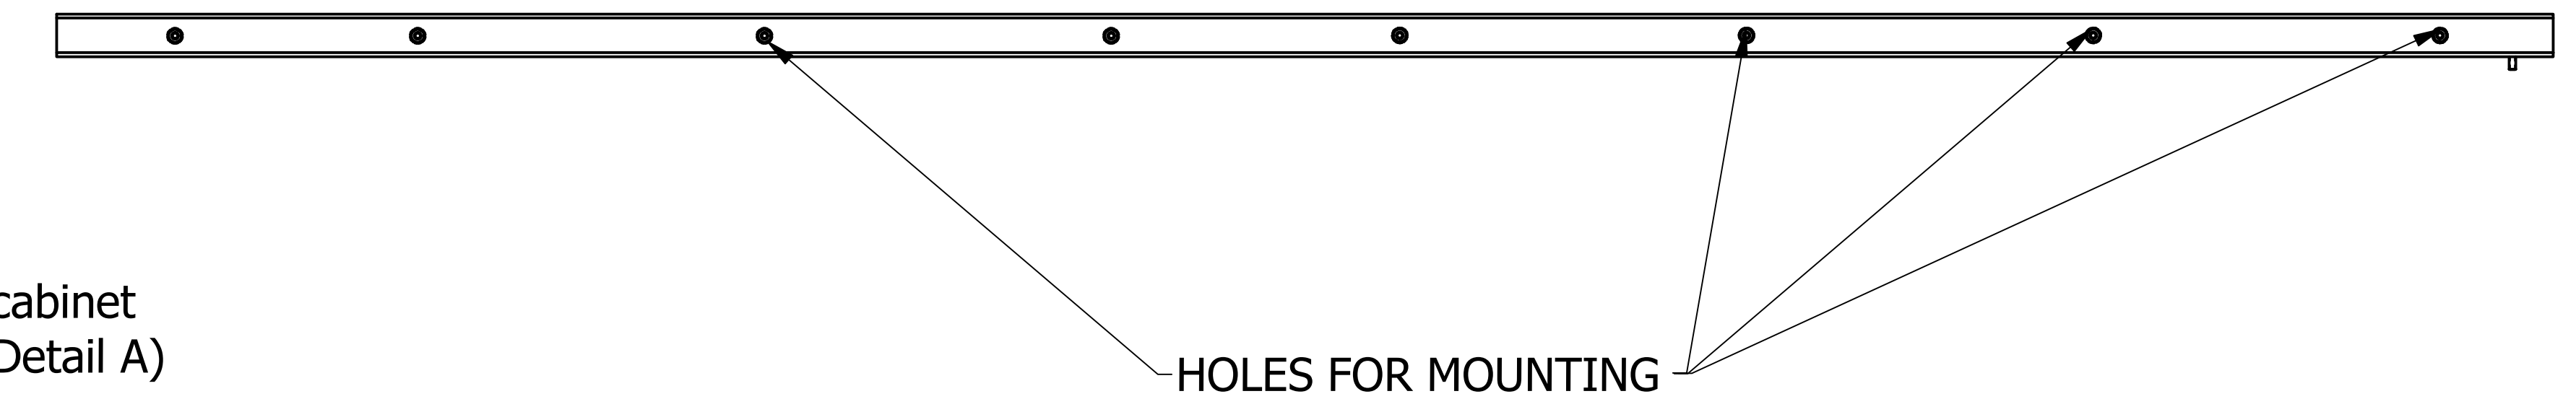

DETAIL B
SCALE 2

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**


R.F.MOTE LTD ENGINEERED SYSTEMS 214 NEWKIRK RD. RICHMOND HILL, ONTARIO L4C 3G7 PHONE (905) 884-5250 FAX (905) 737-5188			
PROJECT			
PART NUMBER			
RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS			
DATE	SCALE	WEIGHT	REV
08-Oct-20	0.08 : 1	124.323 lbmass	00
AUTHOR		SHEET 2 OF 6	
Voula			

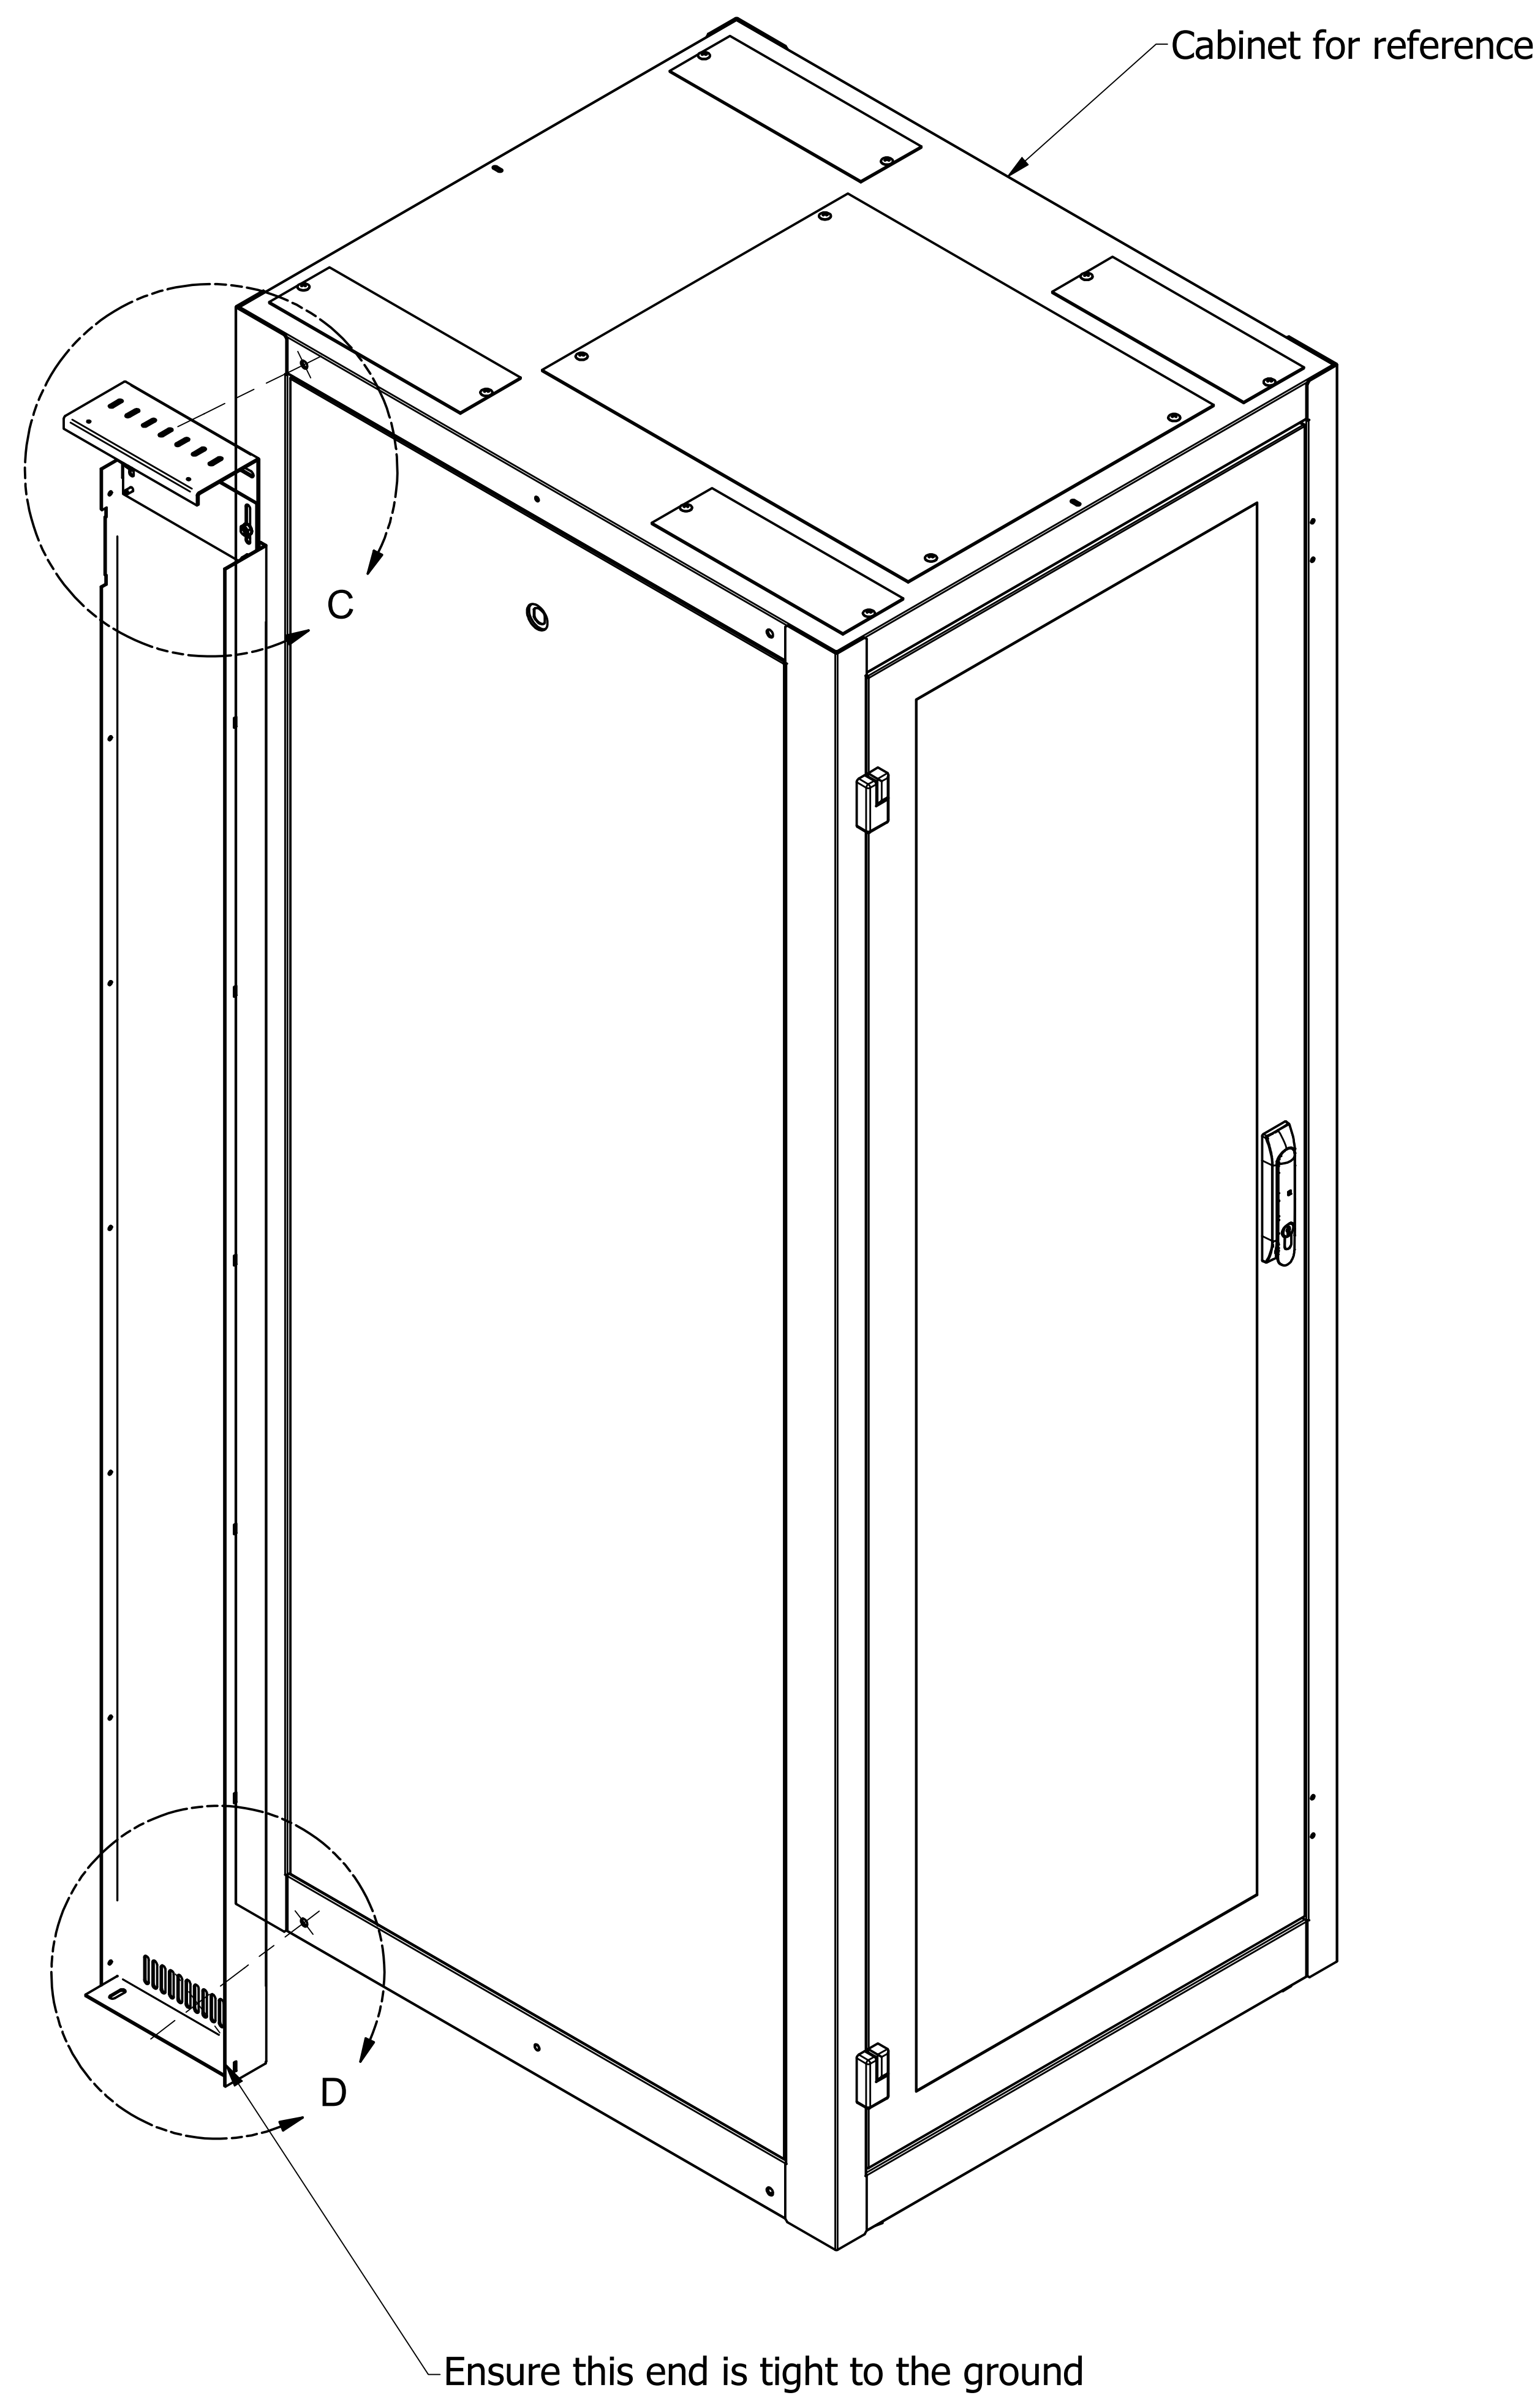

Step 3: Begin by placing the upright post bracket (Item 9) on the floor. Then adjust the slide bracket as necessary and tighten the supplied 1/4"-20 nuts to fix the position of the upright post.

Step 4: Once the upright post (Item 9) has been adjusted to the correct height, fasten the post to the floor. Ensure it is plumb vertically, and it is pushed tight into the cabinet. Note: Hardware for floor mounting is not provided. Ensure proper hardware is selected for the type of flooring it is being mounted to.

*** STRIKE OPTION AVAILABLE

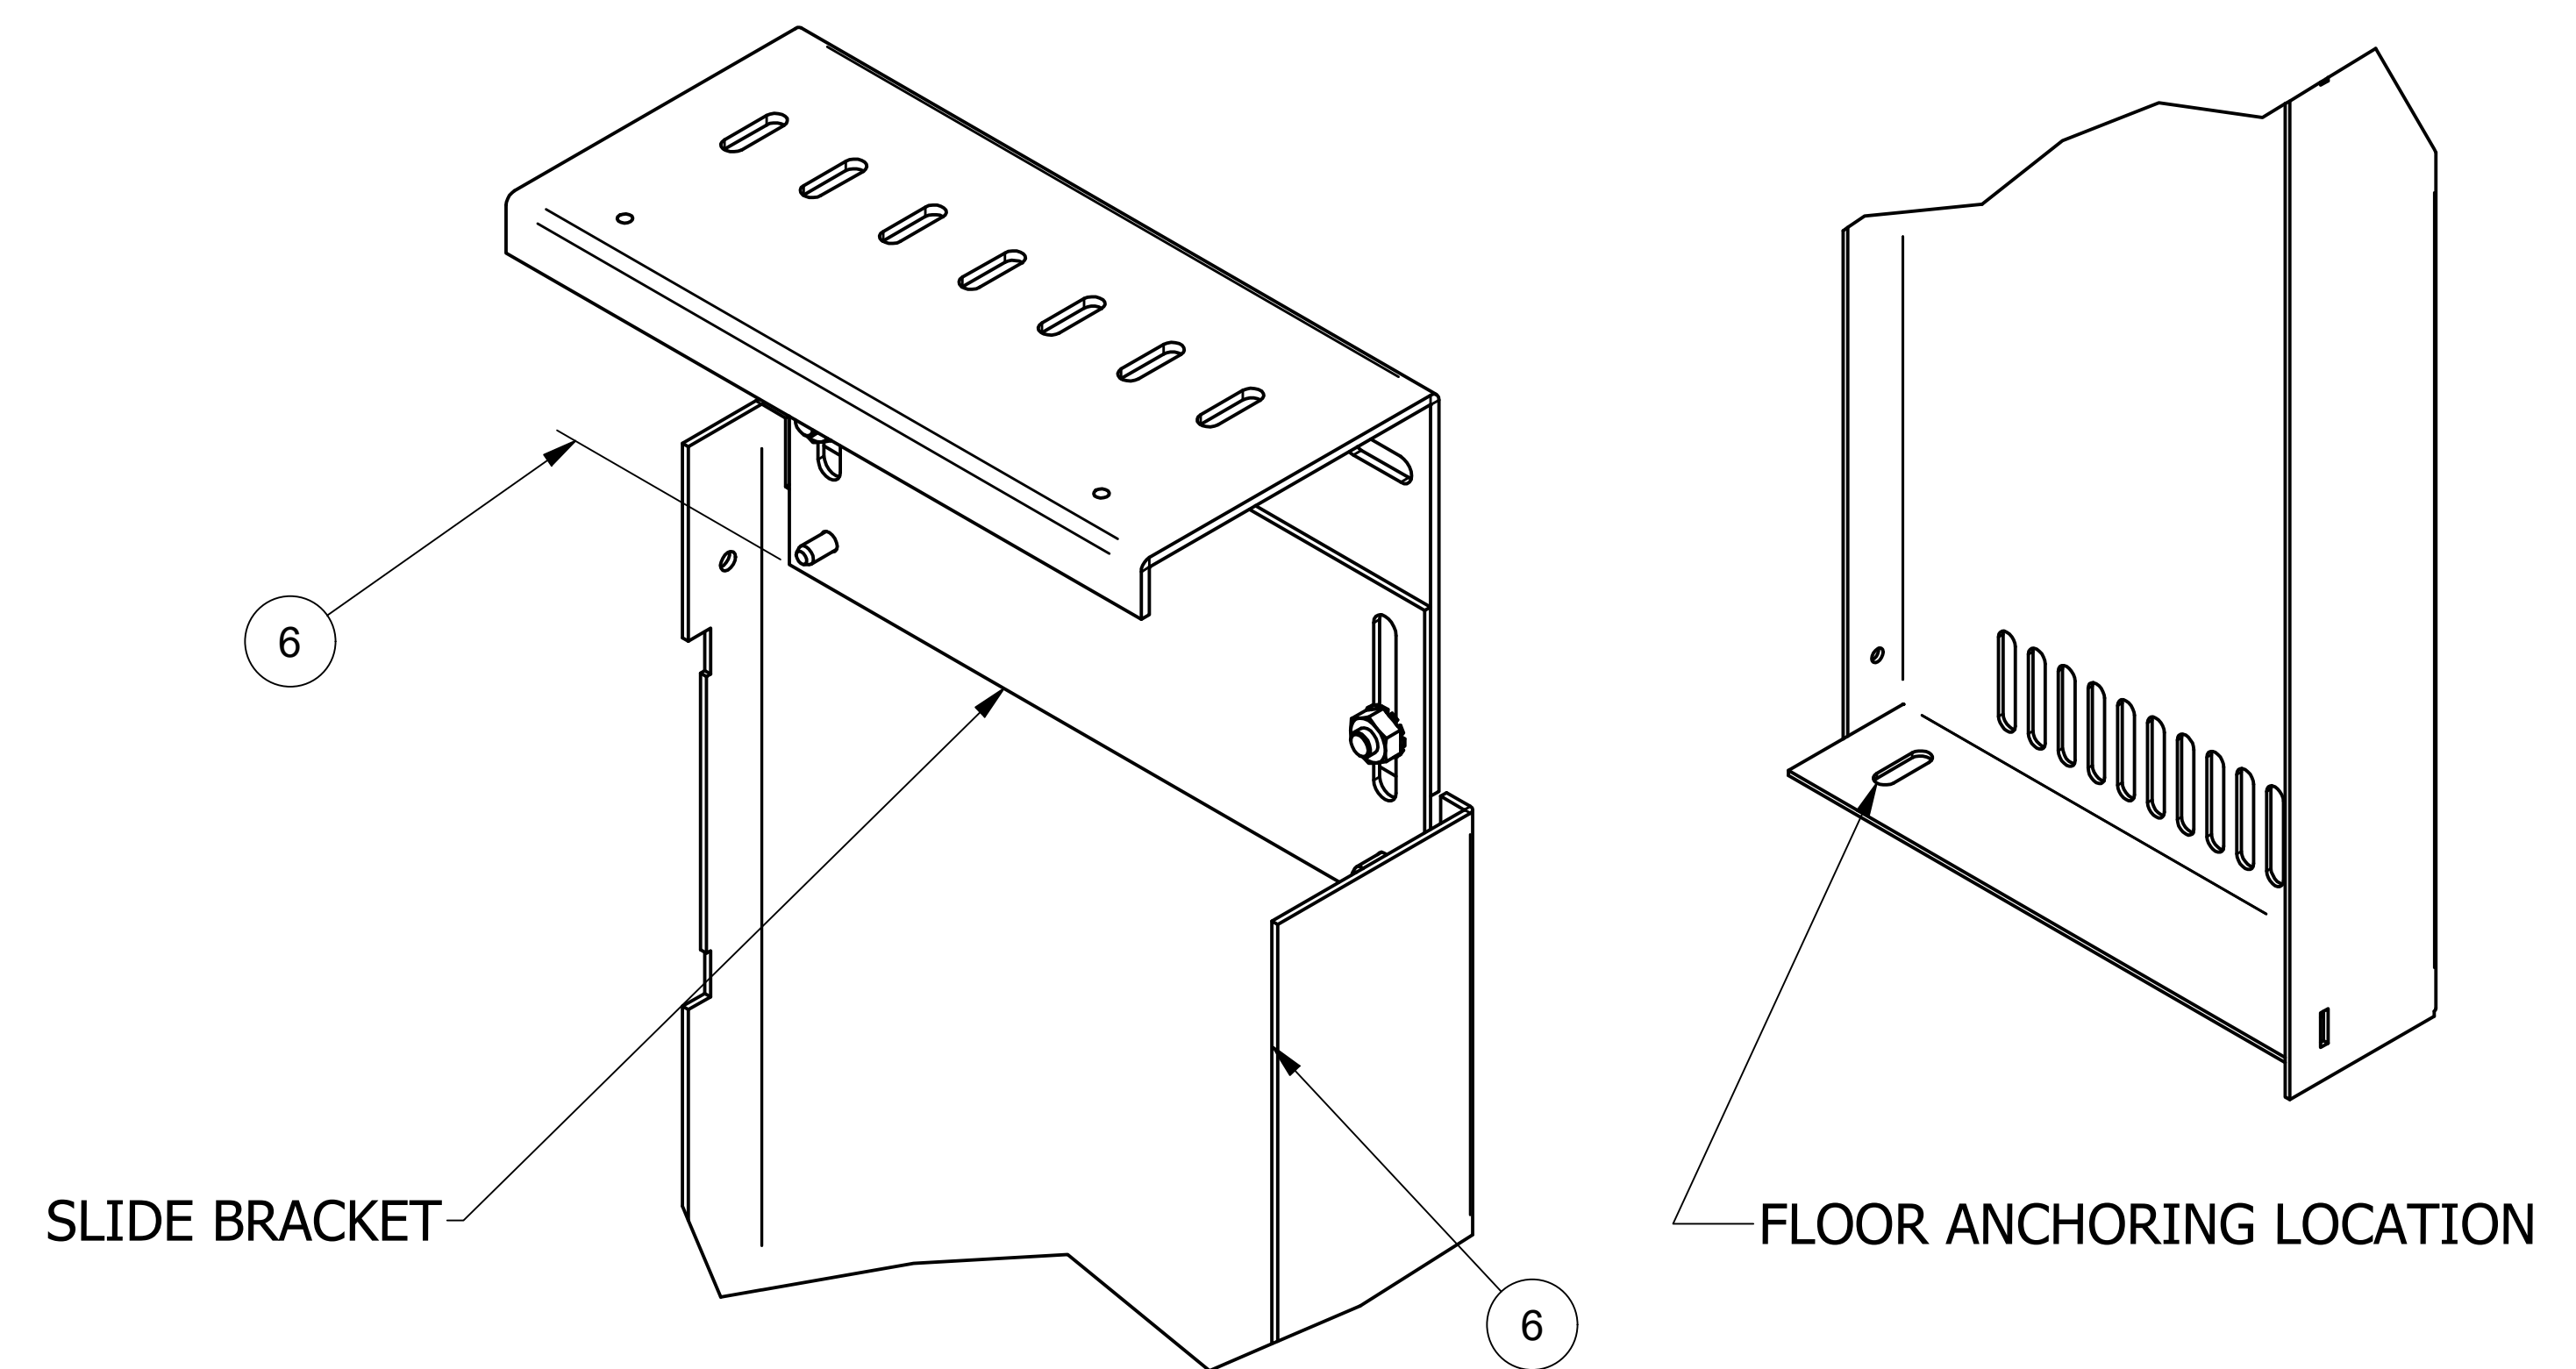

DETAIL C
SCALE 1 / 1.5


DETAIL D
SCALE 1 / 2

R.F.MOTE LTD
ENGINEERED SYSTEMS

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

PROJECT			
PART NUMBER			
RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS			
DATE	SCALE	WEIGHT	REV
08-Oct-20	1/5	124.323 lbmass	00
AUTHOR		SHEET 3 OF 6	
Voula			


The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.** It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

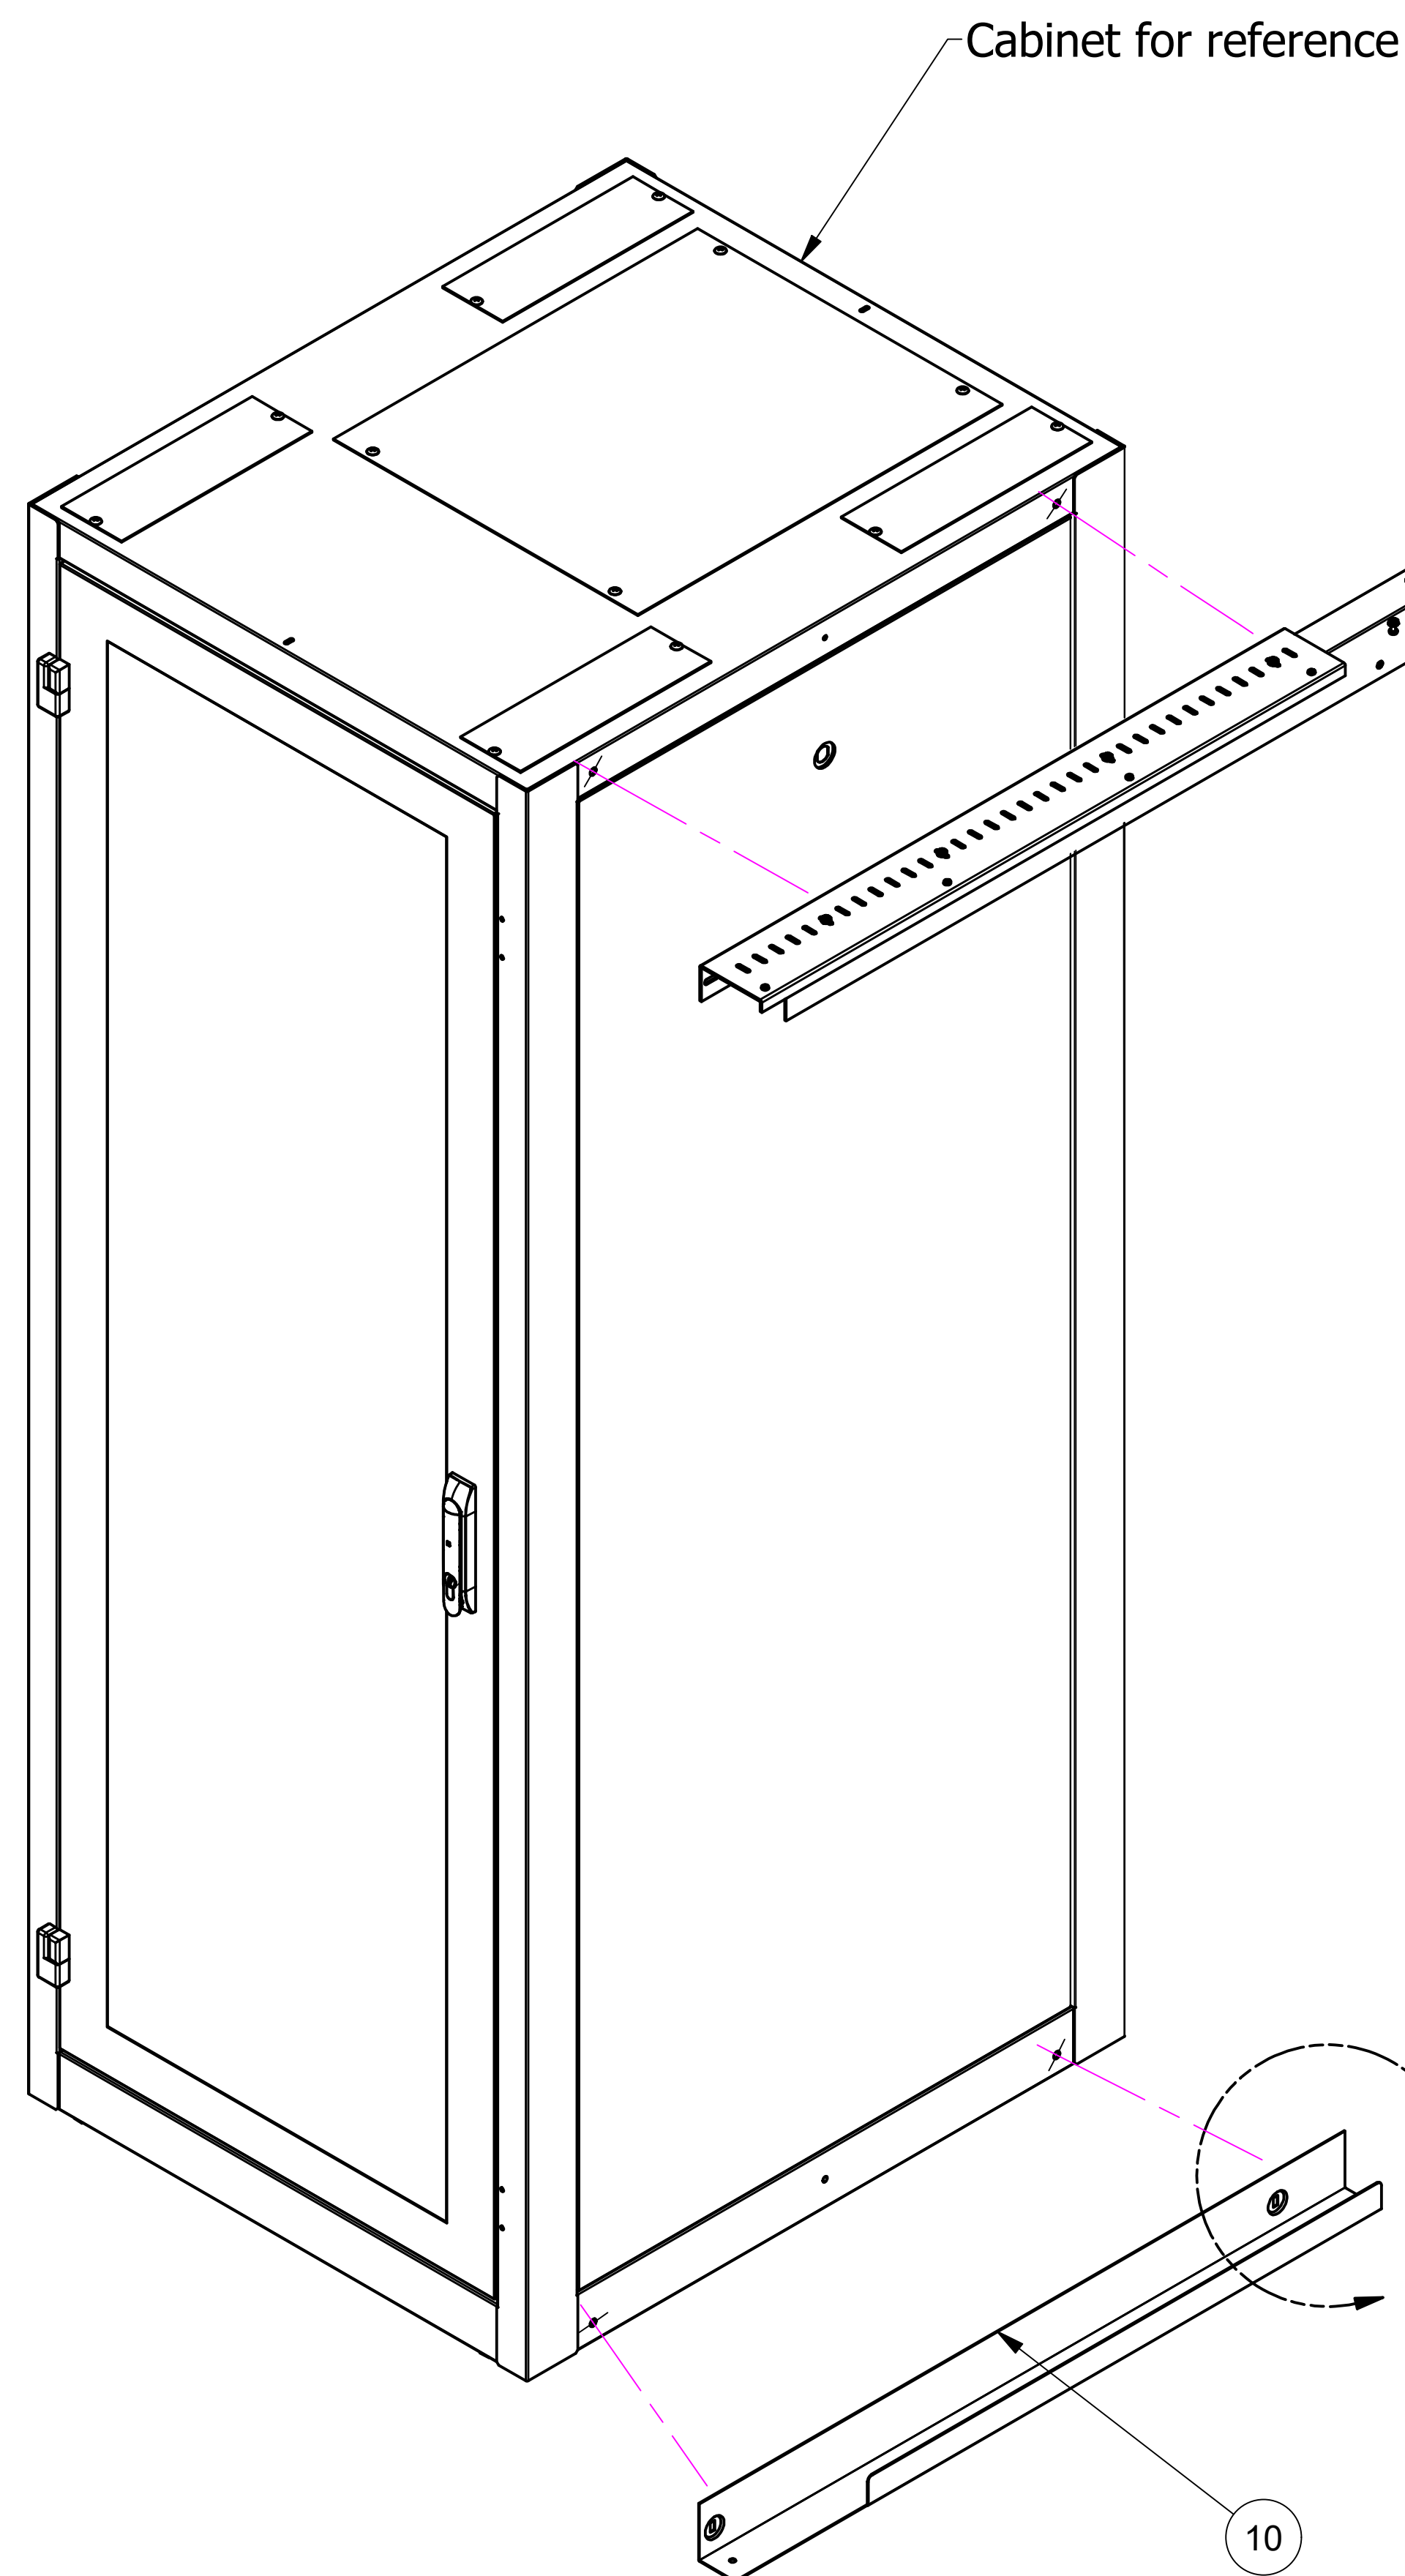


Step 5: Once the upright post bracket is in place and secured (from Step 3 & 4), fasten the front Door Stop (Item 12) on using the supplied #12 Tapping screws. To get the cover on, locate the 4 tab locations on the side of the upright post bracket, insert, and fasten the screws as shown in Detail F and G.

Step 6: Install the bottom Floor Guide (Item 4) at the 2 mounting locations using the supplied 1/4"-20 x 3/4" Carriage bolts and keps nuts.


DETAIL G
SCALE 1

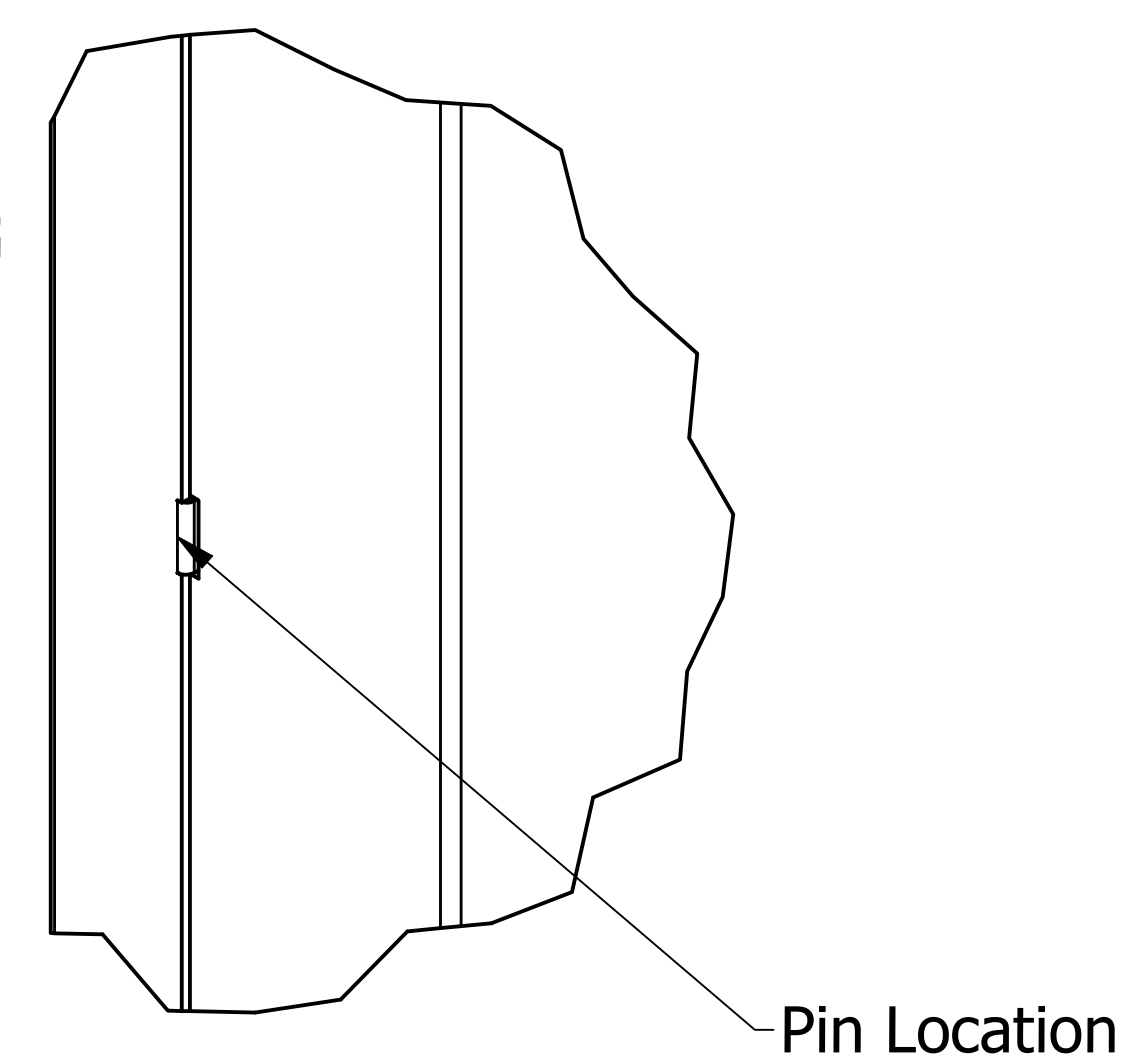

DETAIL E
SCALE 1 / 2

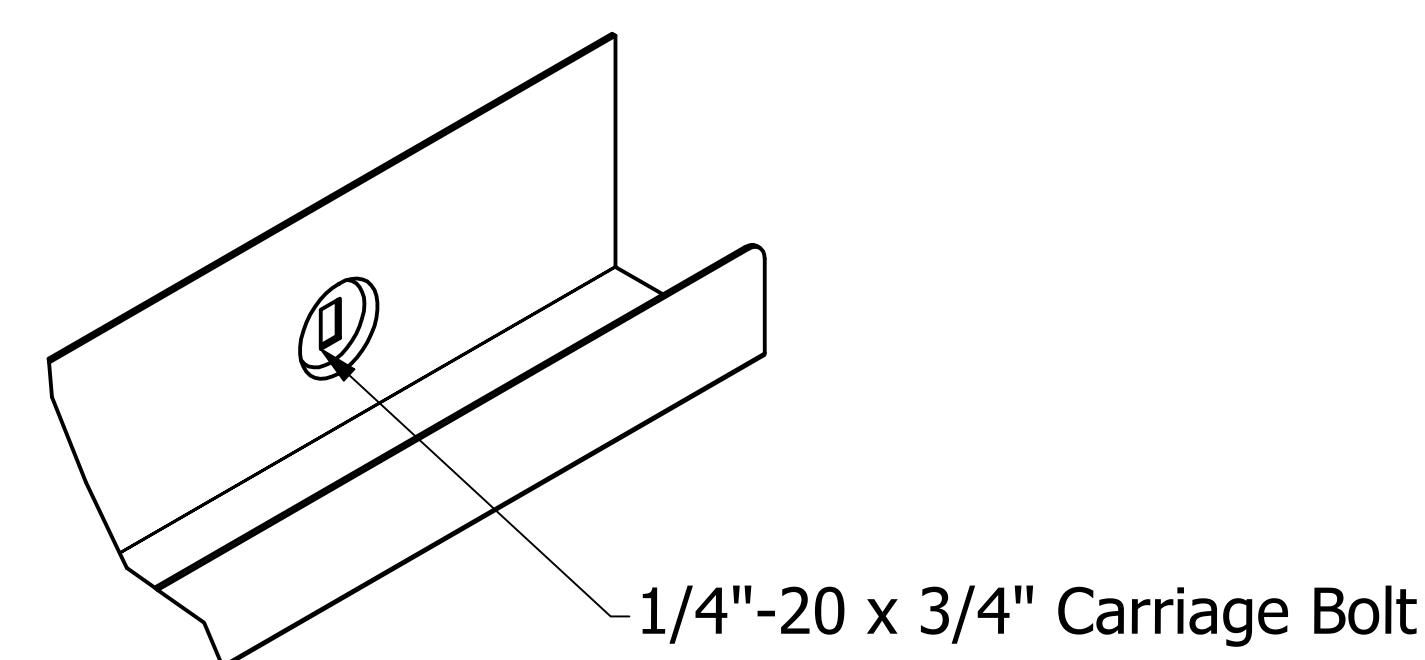

DETAIL F
SCALE 1 / 3

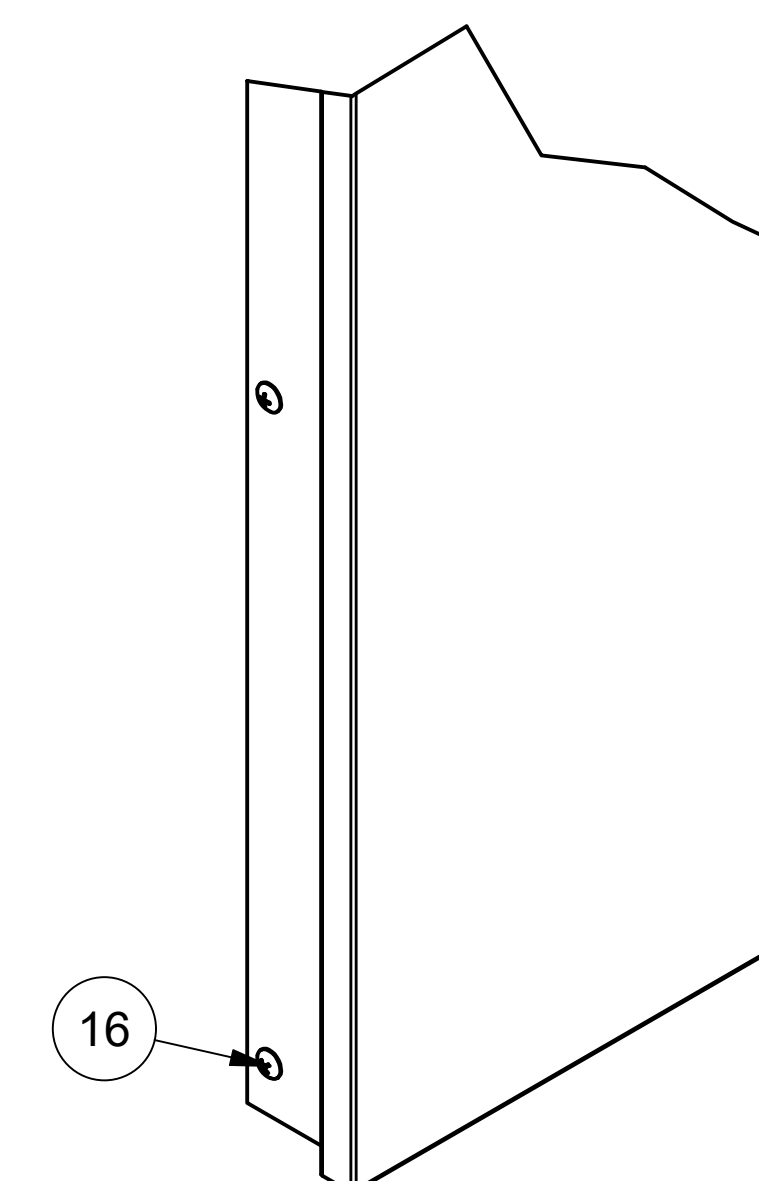

R.F.MOTE LTD
ENGINEERED SYSTEMS

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

PROJECT

PART NUMBER

RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS

DATE
08-Oct-20

SCALE
1/6


WEIGHT
124.323 lbmass

REV
00

AUTHOR
Voula


SHEET 4 OF 6

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.**. It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

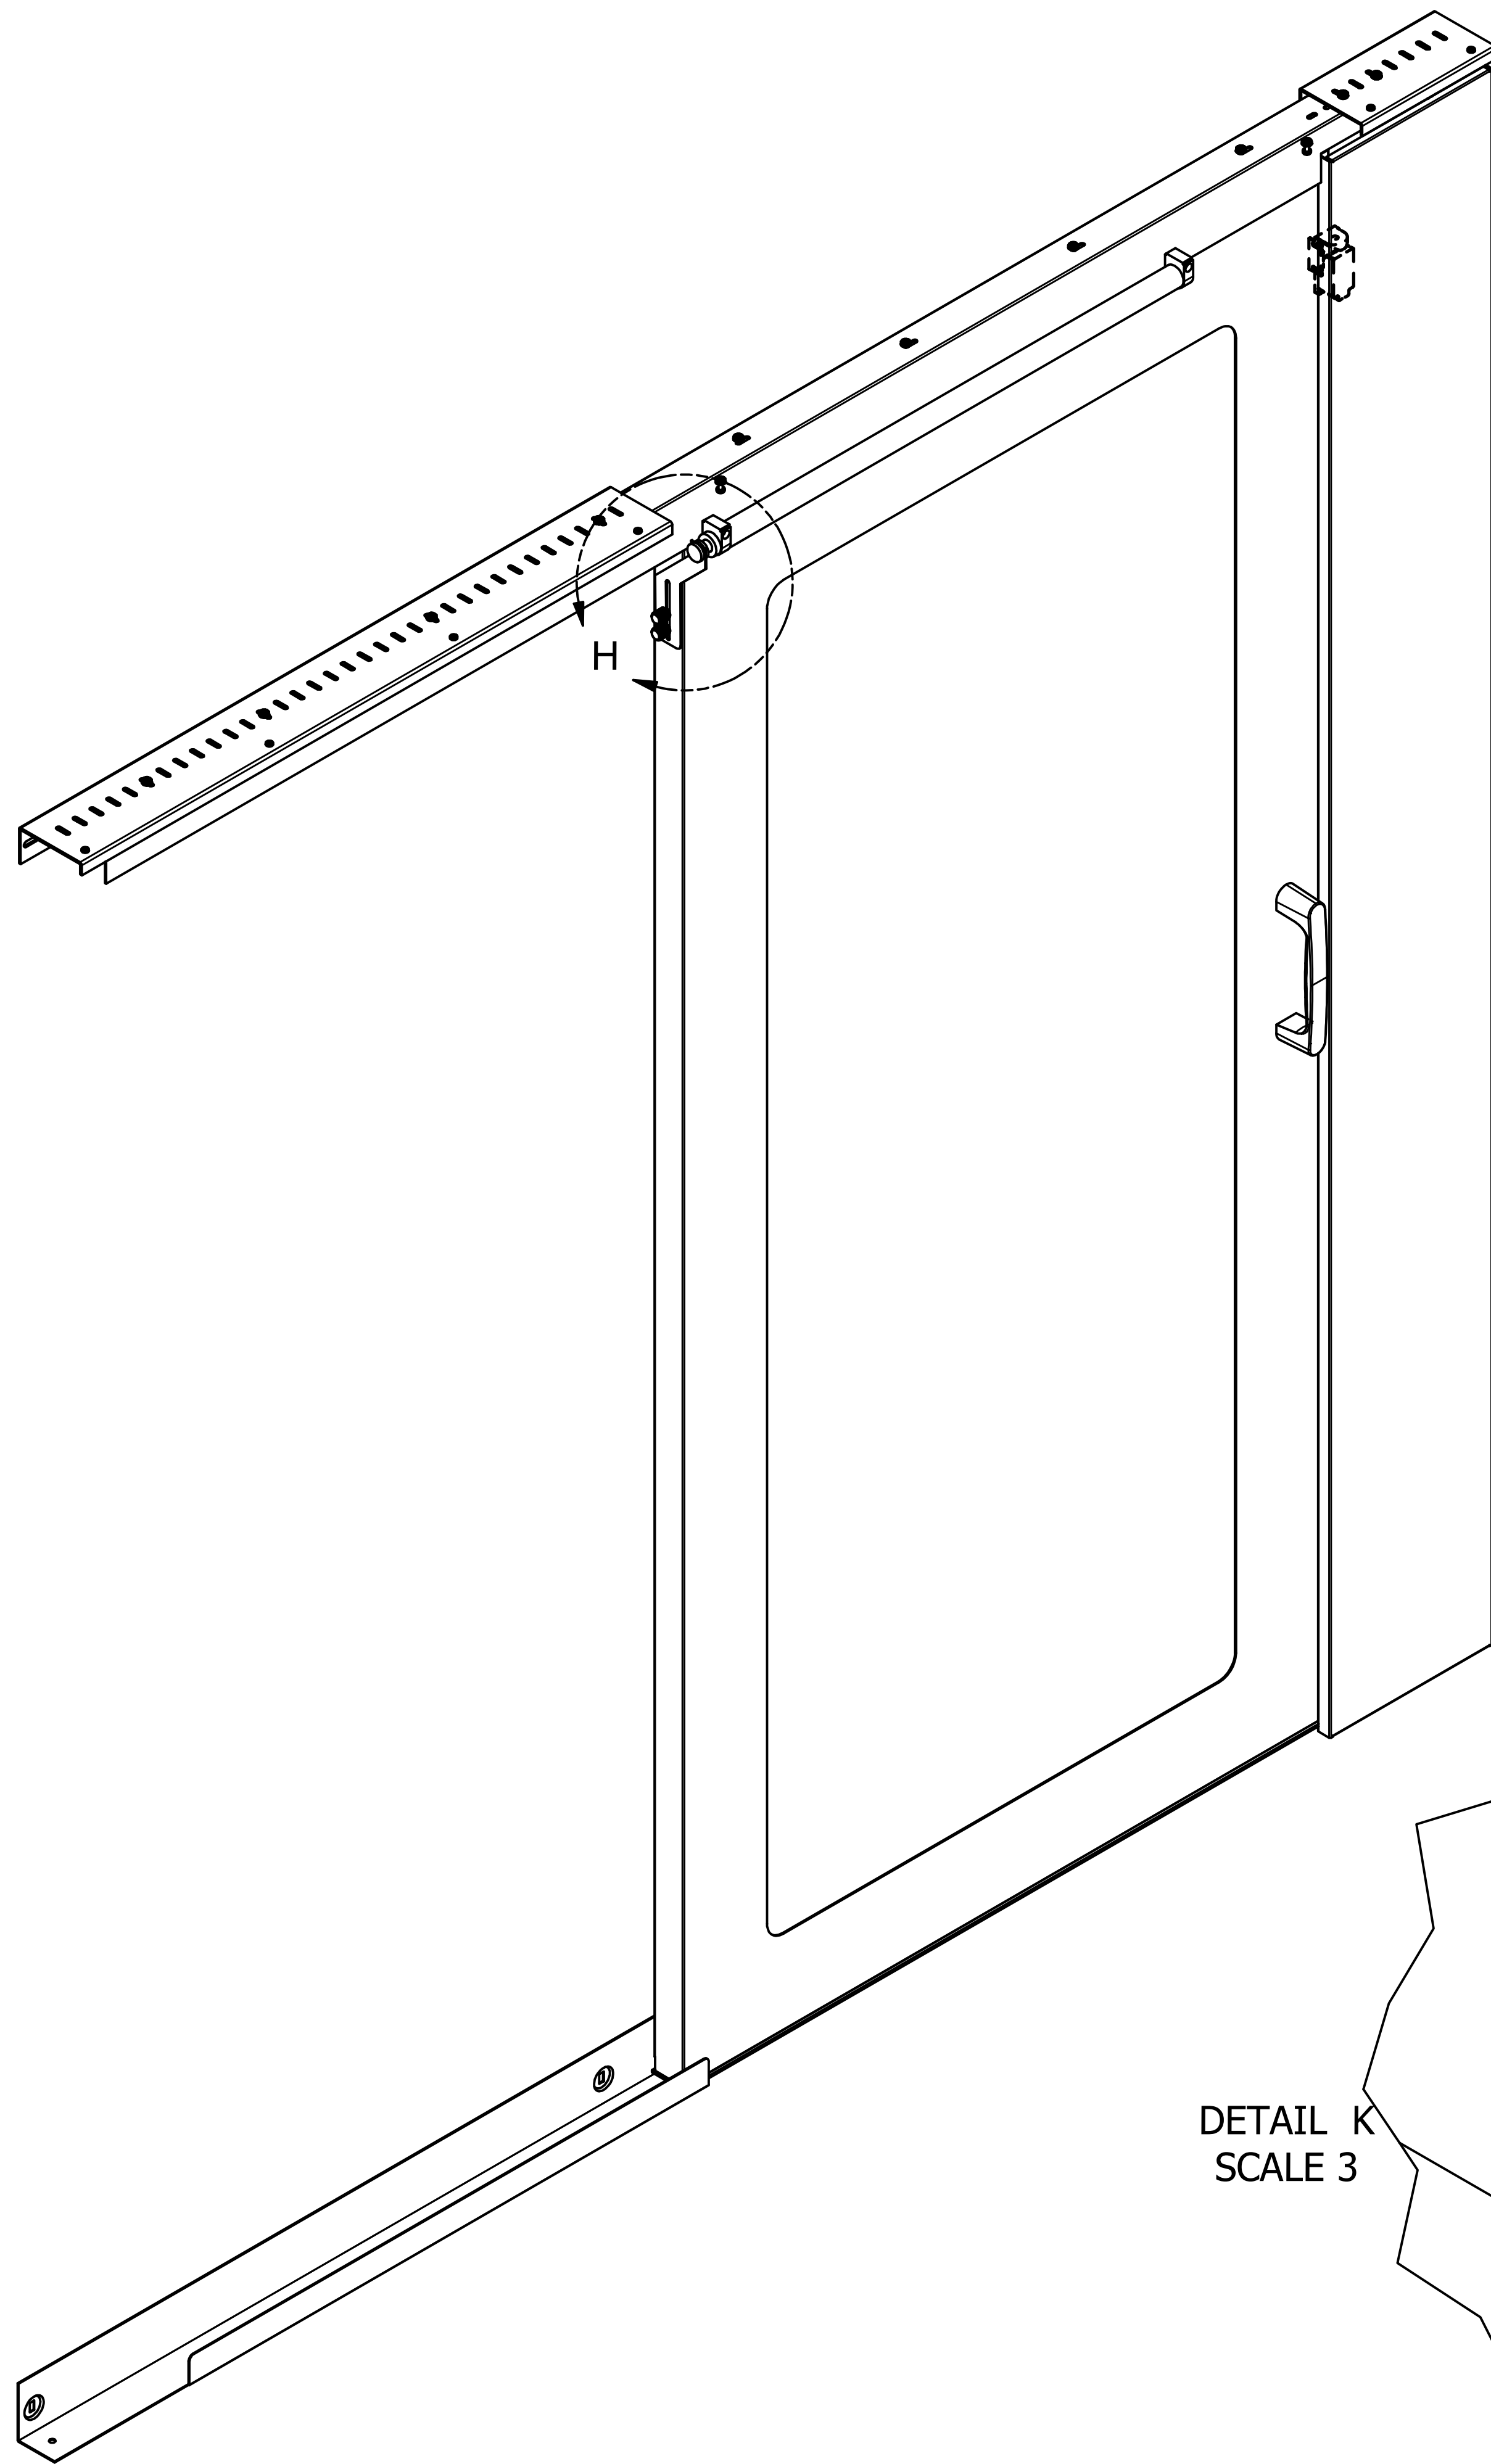


There is adjustment on the end of the door closer to adjust the speed and tension of closing. Adjust as necessary to ensure smooth door function, easy opening tension, and closing speed.

DETAIL K
SCALE 3

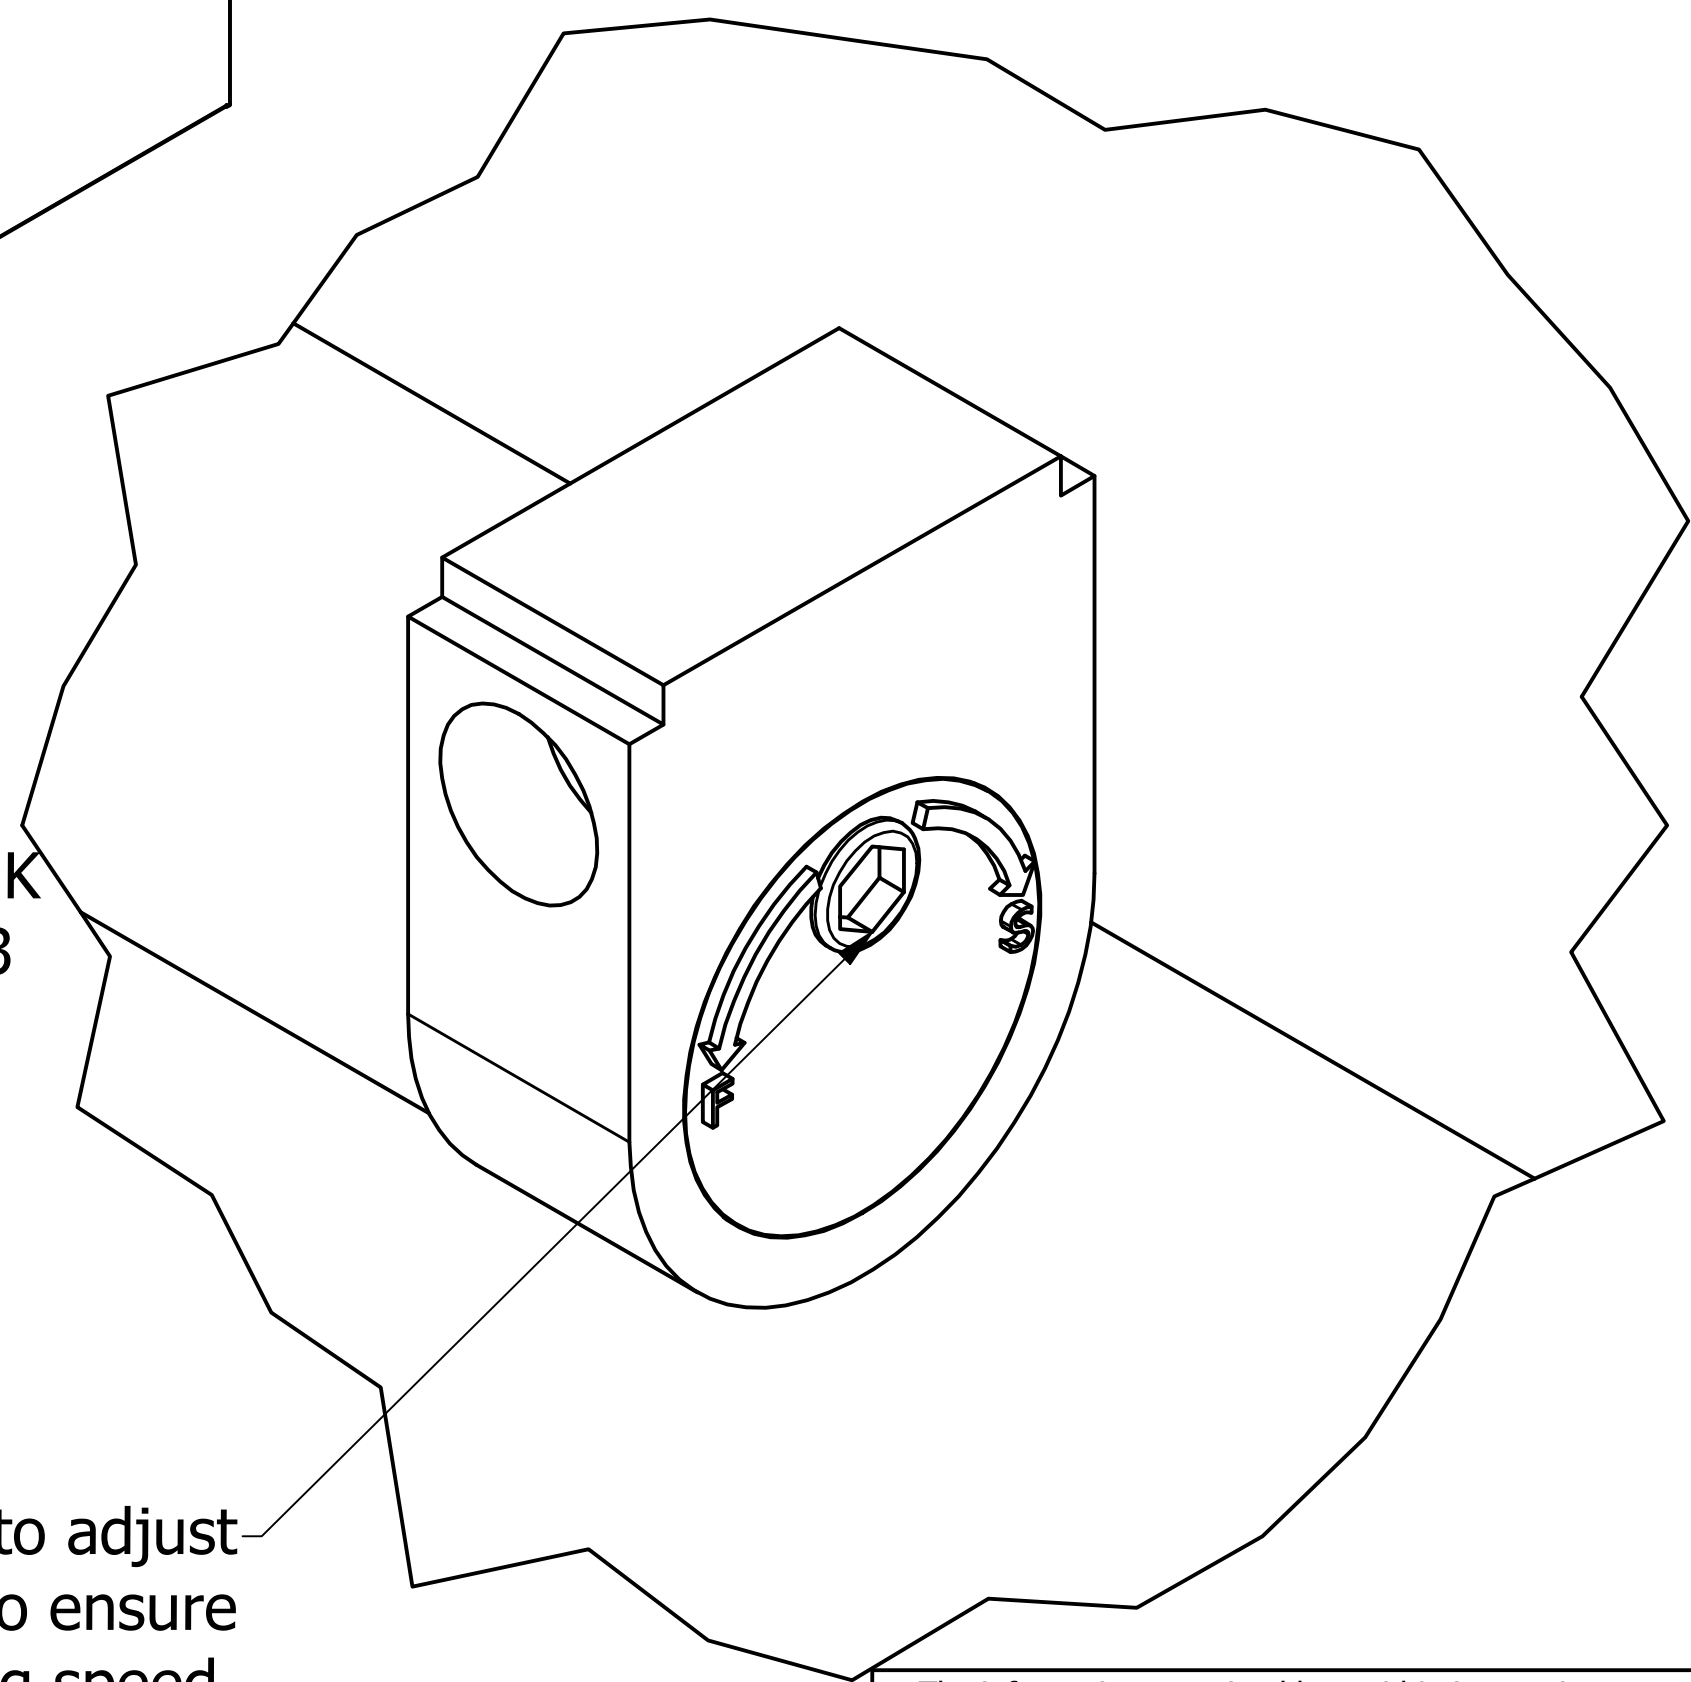

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.**
It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

DETAIL H
SCALE 1

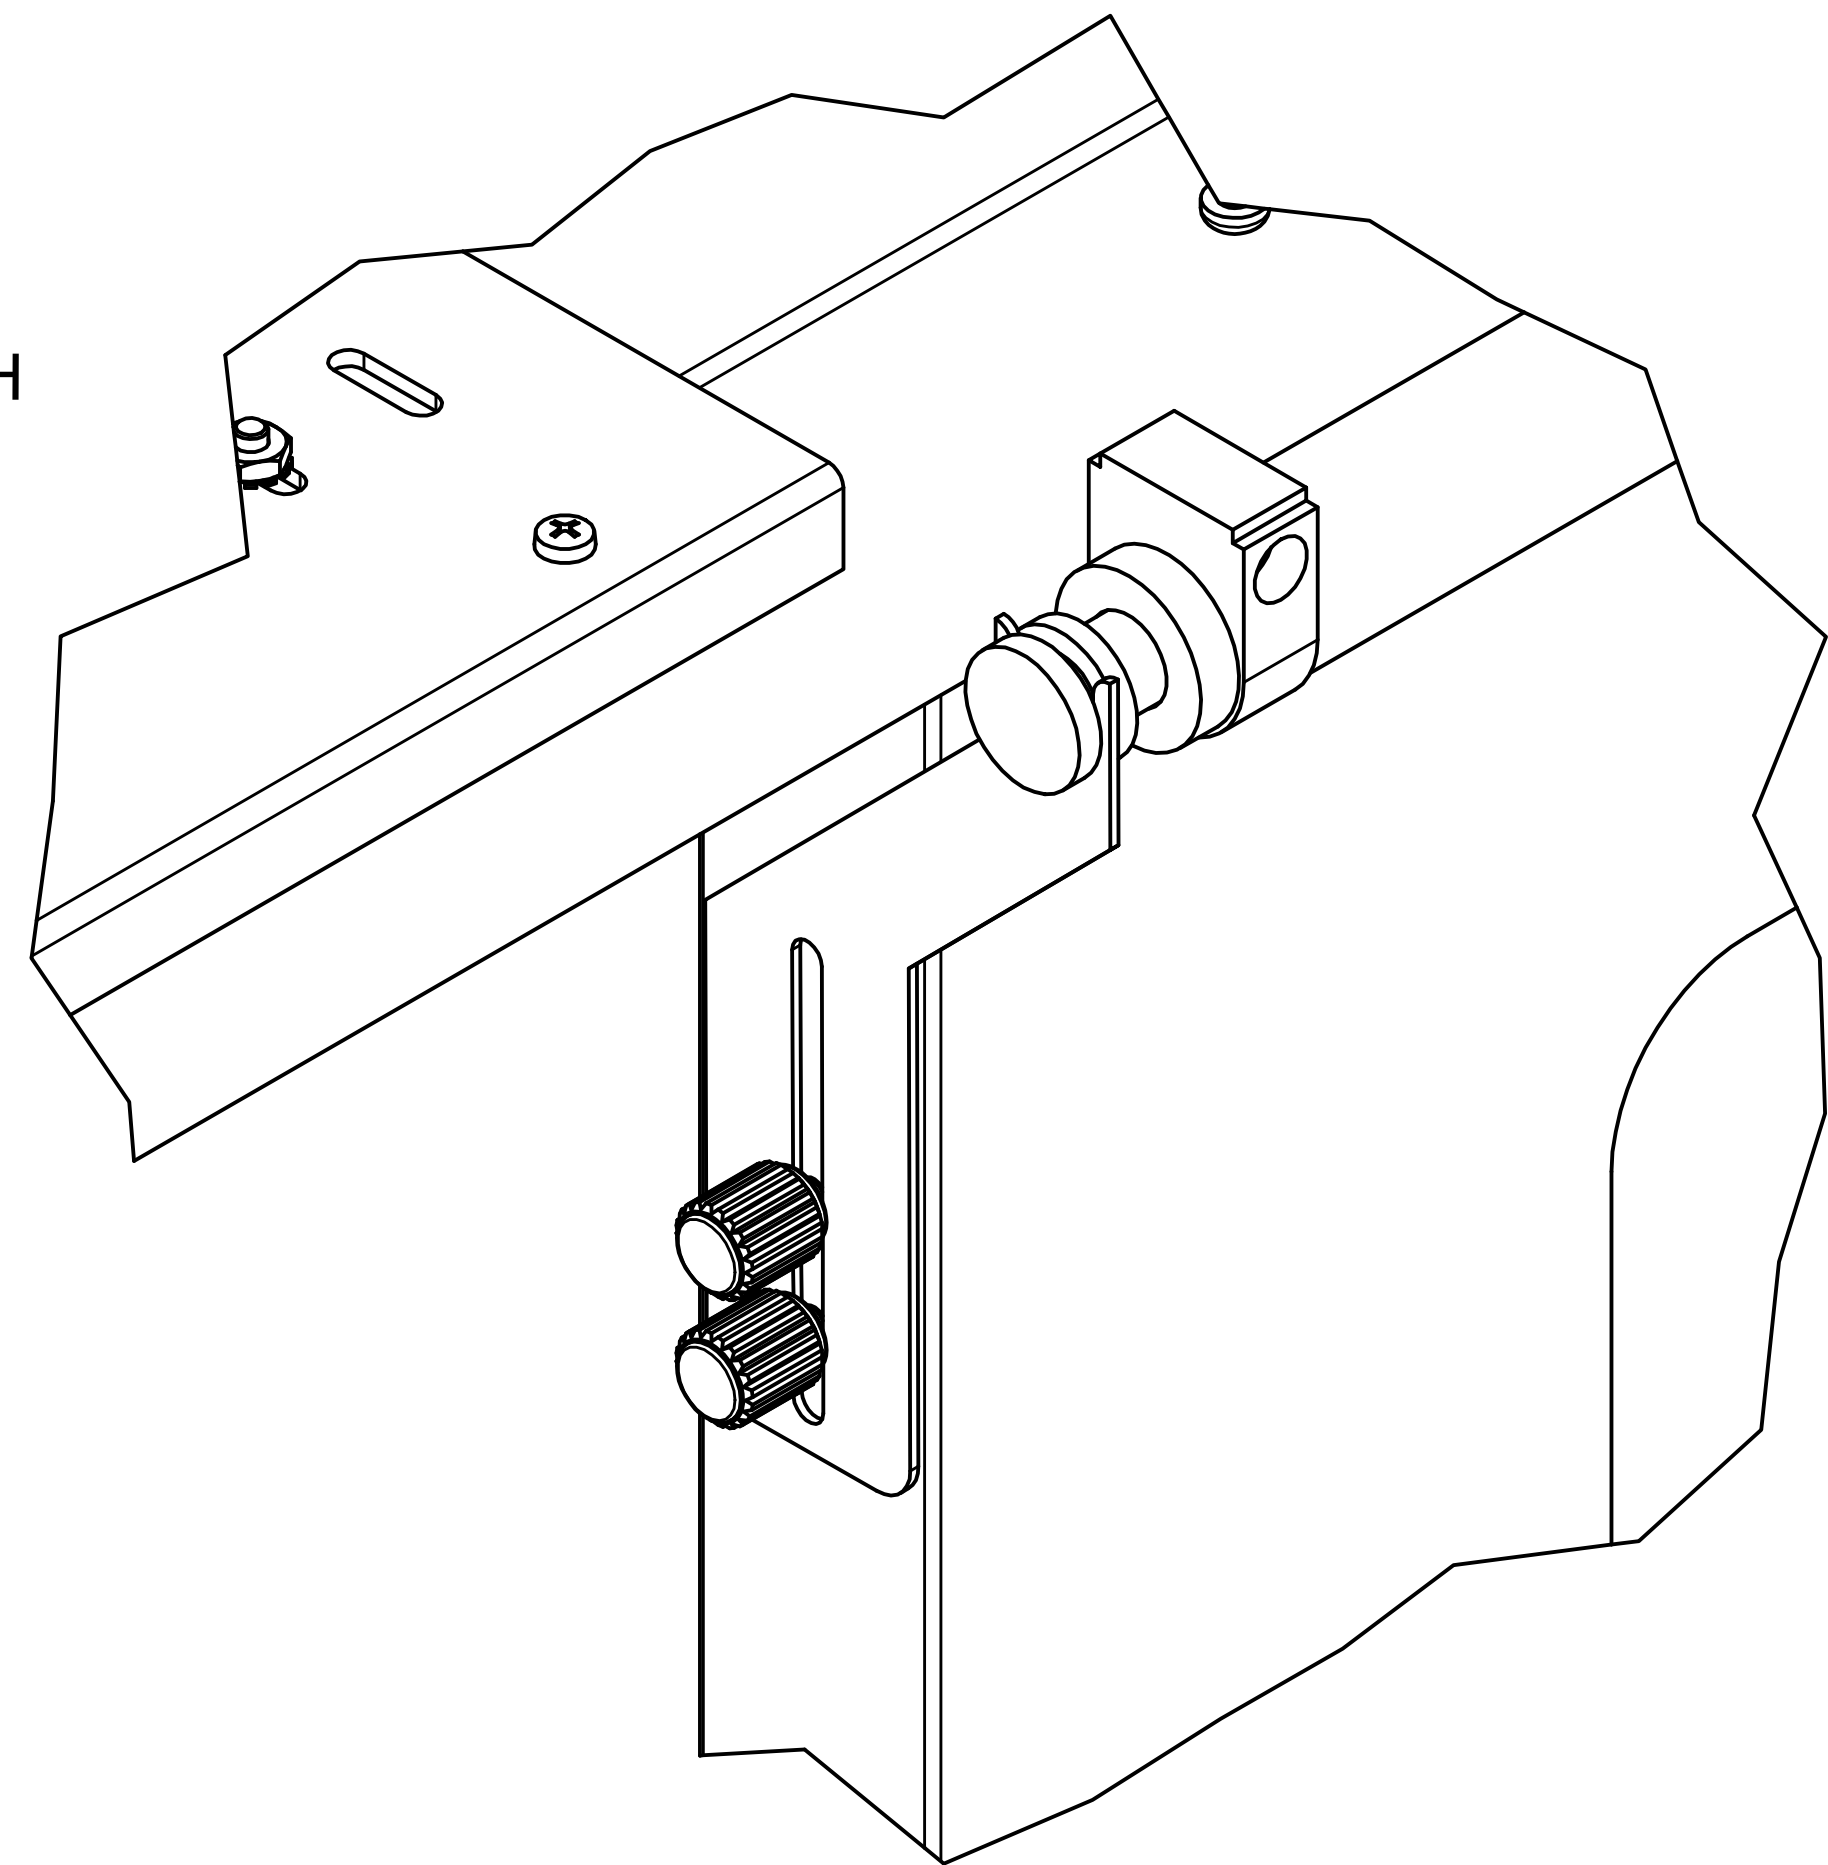

Step 7: Slide the door onto the track from the open end. Slide it all the way to the closed position. From the inside of the aisle, adjust the height of the wheels if necessary to the desired height, and use to level the door .



Step 8: If not already installed, install the door closer to the track mount bracket using the supplied 1/4"-20 x 1-1/8" Allen head socket cap bolts.

Step 9: Once the door closer is intalled, fasten the slider bracket to the outside of the door as shown in Detail H. Use the supplied plastic knobs to tighten the bracket.

Note: This bracket is meant to slide for easy disconnect from the door closer. If/when the doors are to be used manually, loosen the knobs to allow the bracket to slide down and disengage from the door closer, thus allowing the doors to stay in an open position when manually opened.

PROJECT			
PART NUMBER			
RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS			
DATE	SCALE	WEIGHT	REV
08-Oct-20	1/5	124.323 lbmass	00
AUTHOR		SHEET 5 OF 6	
Voula			

R.F.MOTE LTD
ENGINEERED SYSTEMS
214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

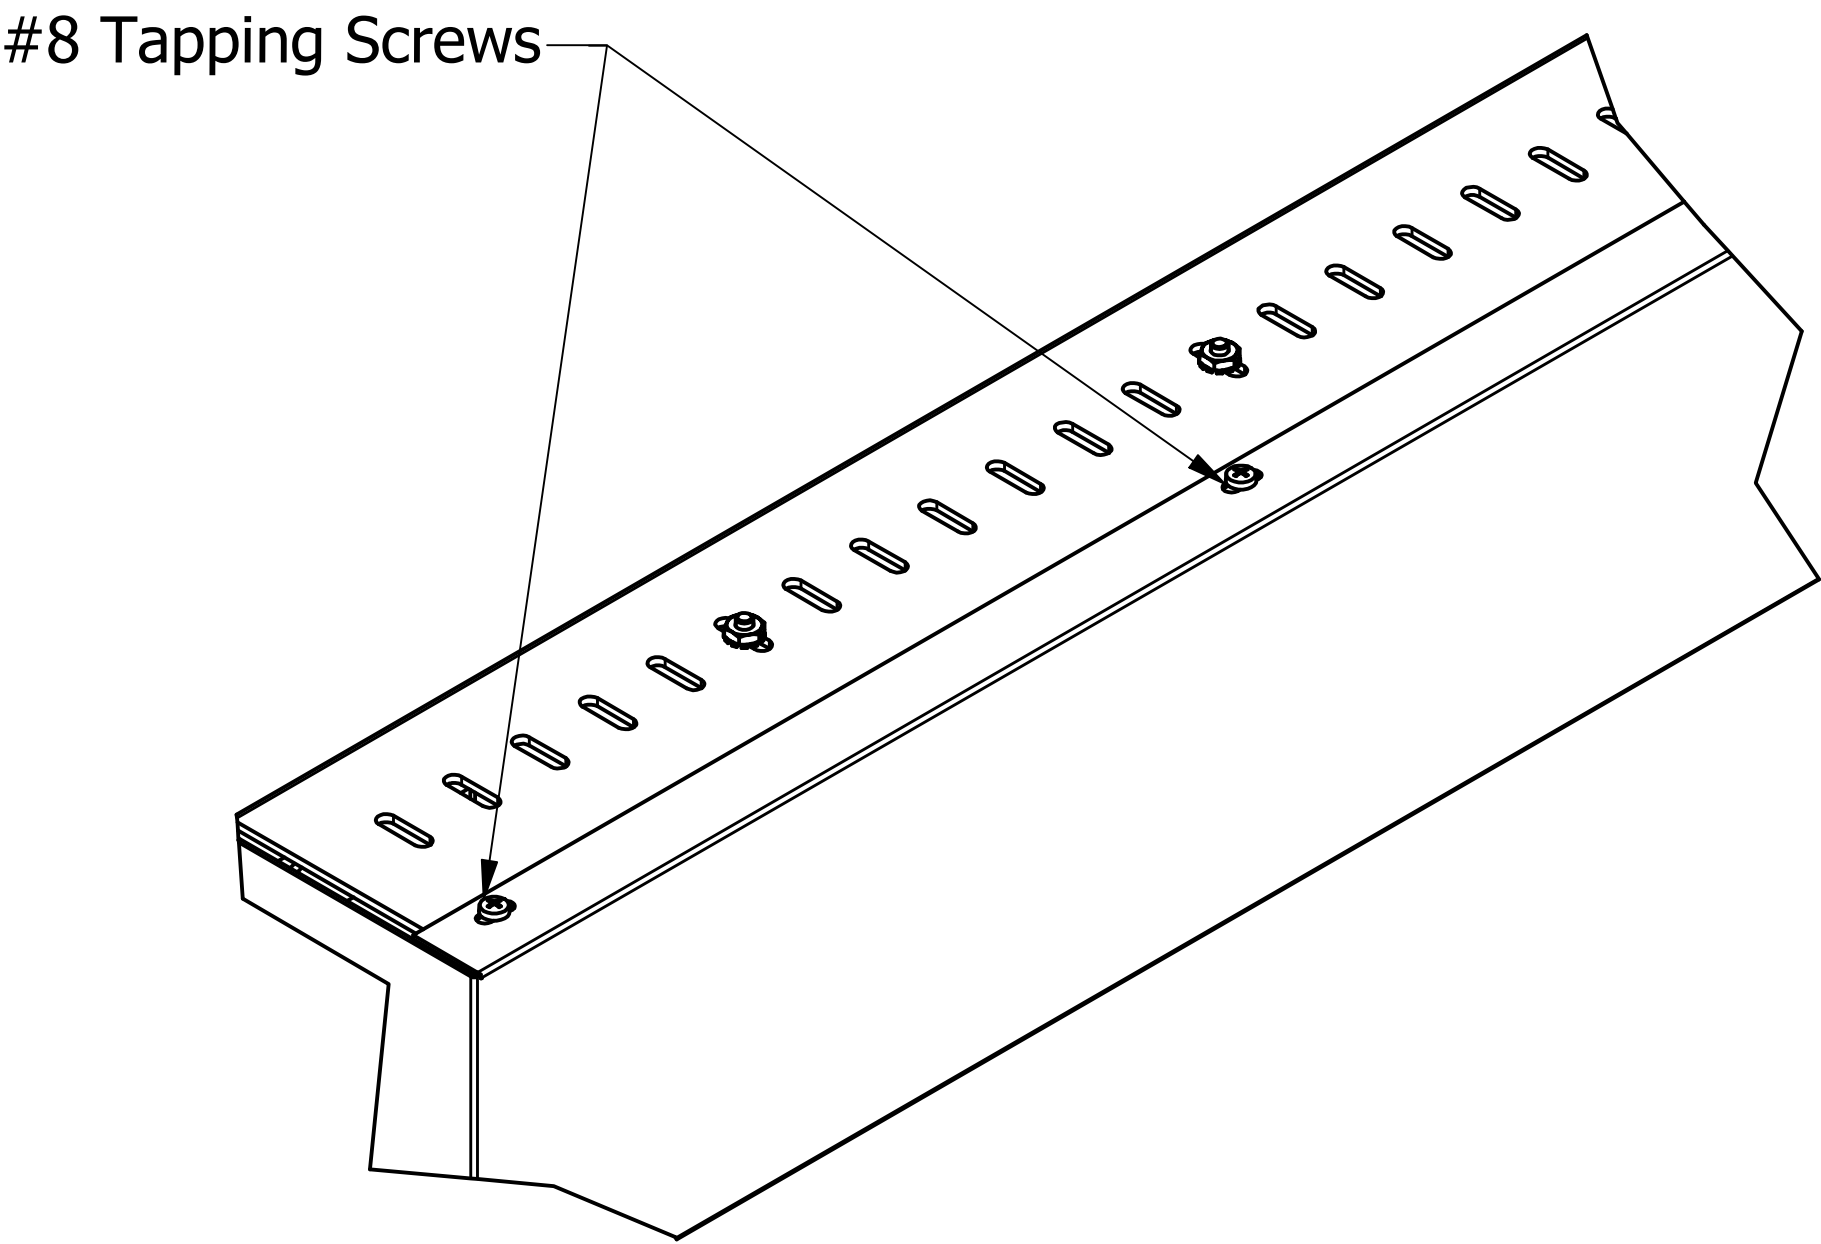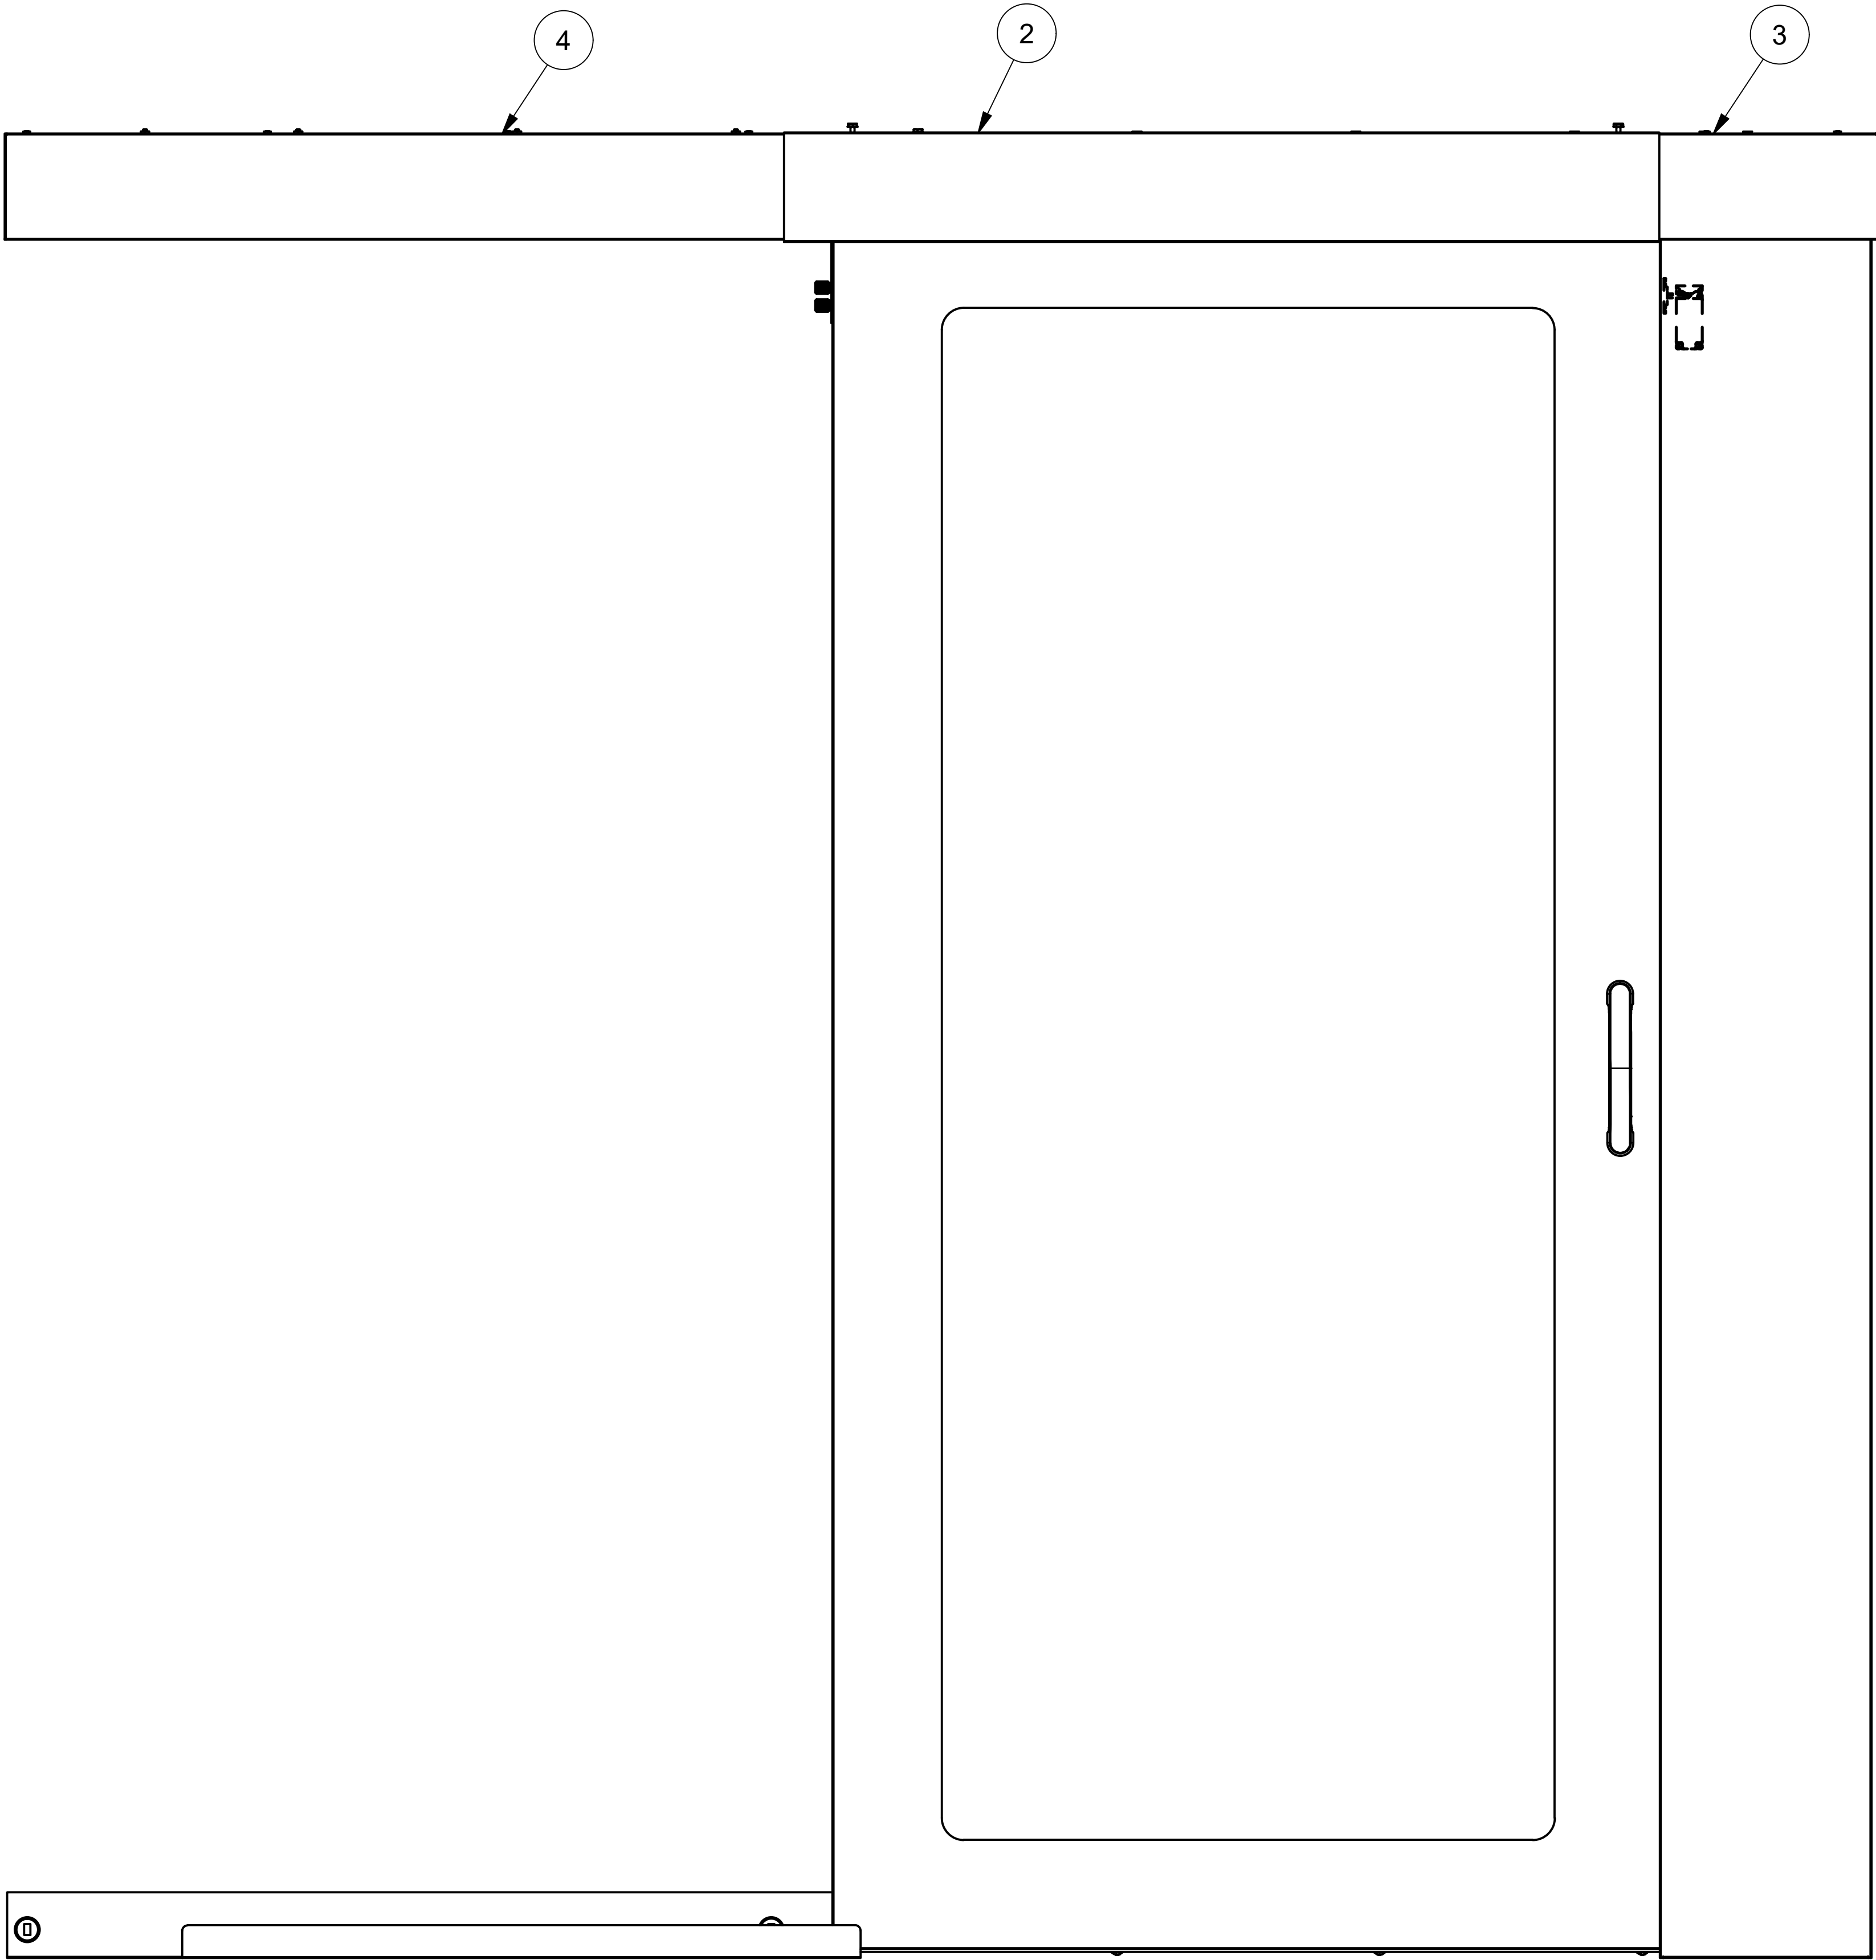

DETAIL L
SCALE 1/2

Step 10: After the doors have been installed and adjusted as necessary for smooth operation, install the top Cover Brackets (Item 5, 13, 14).

Begin by attaching the Left Hand Cover (Item 13) and the Right Hand Cover (Item 14) using the supplied #8 x 3/8" tapping screws. Next install the Middle Cover (Item 5) as it fits over the left hand and right hand side brackets. Use the same #8 Tapping screws to install.

®

The information contained herewithin is proprietary and confidential to **R.F.MOTE LTD.**
It may not be reproduced or further disseminated, in whole or in part, without prior written consent from **R.F.MOTE LTD.**

R.F.MOTE LTD ENGINEERED SYSTEMS 214 NEWKIRK RD. RICHMOND HILL, ONTARIO L4C 3G7 PHONE (905) 884-5250 FAX (905) 737-5188			
PROJECT			
PART NUMBER			
RFM-ERCSSD-83-LH-ASSY INSTRUCTIONS			
DATE	SCALE	WEIGHT	REV
08-Oct-20	1/5	124.323 lbmass	00
AUTHOR	SHEET 6 OF 6		
Voula			