
Your Technology Platform, Protected

HINGE ASSEMBLY INSTRUCTIONS FOR: RFM SERIES 30 CABINETS & RFM SERIES 24 CABINETS

Note: Hinges should be attached to cabinet prior to installing mounting rails and equipment

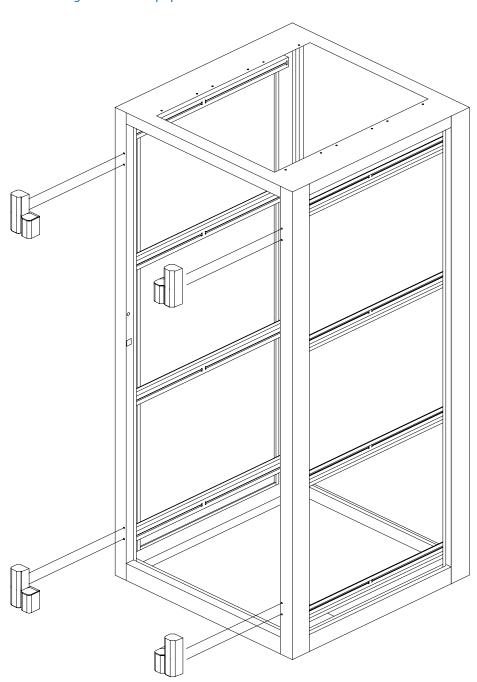

Step 1: Attach the "L" shaped portion of the hinge to the outside of the cabinet frame using supplied #10-32 Screws. (see diagram)

Step 2:

Attach the "straight pin" shaped portion of the hinge to the outside of the cabinet door using the supplied #10-32 screws.

note: ensure the "pin" faces downward relative to the top of cabinet door